

Nomenclature

Complete designation	Designation in this document
Sunny Island 4548-US/5048-US/6048-US	Sunny Island
Interface 485PB-G3	Interface
SMA Solar Technology America, LLC	SMA

Important Safety Instructions**SAVE THESE INSTRUCTIONS**

This manual contains important instructions for the following product:

- SI-485PB-NR

This manual must be followed during installation and maintenance.

The product is designed and tested according to international safety requirements, but as with all electrical and electronic equipment, certain precautions must be observed when installing and/or operating the product. To reduce the risk of personal injury and to ensure the safe installation and operation of the product, you must carefully read and follow all instructions, cautions and warnings in this manual.

WARNING**General Warnings**

All electrical installations must be made in accordance with the local and National Electrical Code® ANSI/NFPA 70 or the Canadian Electrical Code® CSA C22.1. This document does not and is not intended to replace any local, state, provincial, federal or national laws, regulation or codes applicable to the installation and use of the product, including without limitation applicable electrical safety codes. All installations must conform with the laws, regulations, codes and standards applicable in the jurisdiction of installation. SMA assumes no responsibility for the compliance or noncompliance with such laws or codes in connection with the installation of the product.

The product contains no user-serviceable parts. For all repair and maintenance, always return the unit to an authorized SMA Service Center. Before installing or using the product, read all of the instructions, cautions, and warnings in this manual.

Wiring of the product must be made by qualified personnel only.

Intended Use

The SI-485PB-NR retrofit kit enables the setup of an RS485 communication. Via RS485, the Sunny Island can communicate with SMA communication products and SMA inverters. Use the interface of the retrofit kit according to the instructions in the documentation. Any other use may cause property damage. For safety reasons, it is not permitted to modify the product or install components that are not explicitly recommended or distributed by SMA Solar Technology America, LLC for this product. The enclosed documentation is an integral part of this product.

- Read and adhere to the documentation.
- Keep the documentation in a convenient place for future reference.

Scope of Delivery

Check the scope of delivery for completeness and any externally visible damage. Contact your specialty retailer if the scope of delivery is incomplete or damaged.

Quantity	Designation
1	Interface 485PB-G3
1	White RJ45 data cable with three conductors with stripped insulation
1	Terminator
1	Mounting instructions

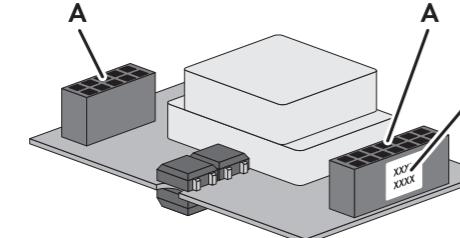
Product Description

Figure 1: Design of the interface

Item	Designation
A	Connection plug
B	Type label

The information on the type label is intended to help you in the safe use of the interface and will be needed if you contact the SMA Service Line. The type label must be permanently attached to the interface.

Validity**Information on this Document****Target Group**

This document is intended for qualified persons. Only personnel with the following qualifications are allowed to perform the tasks set forth in this document:

- Knowledge about the functional principle and operation of off-grid systems
- Knowledge in how to deal with the dangers and risks associated with installing and using electrical devices and batteries
- Knowledge of the installation and commissioning of electrical devices
- Knowledge and observance of the local standards and guidelines
- Knowledge and observance of this document and all safety instructions

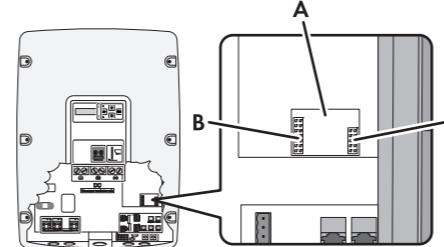
Installing the SI-485PB-NR

Figure 2: Installation position and connection of the SI-485PB-NR in the SI4548-US-10 / SI5048-US / SI6048-US-10

Item	Designation
A	Interface slot
B	Connection jack

1. WARNING**Danger to life due to high voltages**

High voltages are present in the off-grid system and in the Sunny Island. The Sunny Island can start on its own from standby.

- Turn off or disconnect the components in the following order:
 - Sunny Island
 - All loads, AC sources, external energy sources and DC sources
 - Miniature circuit-breaker for AC sources and the external energy source in the sub-distributions
- Switch the DC miniature circuit-breaker to the **Off** position
or
- Open the switch-disconnectors of the BatFuse.
- Ensure that the device cannot be reconnected.
- Wait at least 15 minutes. This allows the capacitors to discharge.
- Open the enclosure lid of the Sunny Island and ensure that no voltage is present.
- Ground and short-circuit the AC conductors.
- Cover or safeguard any adjacent live components.

Removing the SI-485PB-NR**1. WARNING****Danger to life due to high voltages**

High voltages are present in the off-grid system and in the Sunny Island. The Sunny Island can start on its own from standby.

- Turn off or disconnect the components in the following order:
 - Sunny Island
 - All loads, AC sources, external energy sources and DC sources
 - Miniature circuit-breaker for AC sources and the external energy source in the sub-distributions
- Switch the DC miniature circuit-breaker to the **Off** position
- Open the switch-disconnectors of the BatFuse.
- Ensure that the device cannot be reconnected.
- Wait at least 15 minutes. This allows the capacitors to discharge.
- Open the enclosure lid of the Sunny Island and ensure that no voltage is present.
- Ground and short-circuit the AC conductors.
- Cover or safeguard any adjacent live components.

Contact**SMA Solar Technology America, LLC**

6020 West Oaks Blvd, Ste 300
Rocklin, CA 95765

Tel. +1 916 625 0870
Tel. +1 877-MY SMA TECH
Tel. +1 877 697 6283
(Toll free, available for USA, Canada and Puerto Rico)
Fax: +1 916 625 0871
Service@SMA-America.com
www.SMA-America.com

Legal Restrictions

Copyright © 2012 SMA America, LLC. All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, be it electronic, mechanical, photographic, magnetic or otherwise, without the prior written permission of SMA America, LLC.

SMA America, LLC doesn't make representations, express or implied, with respect to this documentation or any of the equipment and/or software it may describe, including (with no limitation) any implied warranties of utility, merchantability, or fitness for any particular purpose. All such warranties are expressly disclaimed. Neither SMA America, LLC nor its distributors or dealers shall be liable for any indirect, incidental, or consequential damages under any circumstances.

(The exclusion of implied warranties may not apply in all cases under some statutes, and thus the above exclusion may not apply.)

Specifications are subject to change without notice. Every attempt has been made to make this document complete, accurate and up-to-date. Readers are cautioned, however, that SMA America, LLC reserves the right to make changes without notice and shall not be responsible for any damages, including indirect, incidental or consequential damages, caused by reliance on the material presented, including, but not limited to, omissions, typographical errors, arithmetical errors or listing errors in the content material.

All trademarks are recognised even if these are not marked separately. Missing designations do not mean that a product or brand is not a registered trademark.

SMA America, LLC,
3801 N. Havana Street,
Denver, CO 80239 U.S.A.

2. NOTICE**Destruction of the connection jack due to improper installation**

- Ground yourself before touching any components.
- Position the interface above the interface slot and adjust it vertically to it. Pay attention to different plug sizes.
- Position the interface on the connection jack and press with slight pressure. This avoids damage of the pins in the connection jack.

- 3. Close the Sunny Island. Ensure that enclosure openings which are not used for the RJ45 data cable are closed with cable support sleeves (see technical documentation of the Sunny Island).

Disposing of the SI-485PB-NR

- Dispose of the SI-485PB-NR in accordance with the locally applicable disposal regulations for electronic waste

or

- Return the SI-485PB-NR at your own expense. Label the packaging with the information "FOR DISPOSAL".

Technical Data**Communication**

Communication interfaces	RS485
RS485 radio range	3,937 ft. (1,200 m)

Mechanical Data

Width x height x depth	1 1/8 in. x 1 11/16 in. x 2 1/32 in. (28 mm x 42 mm x 16 mm)
Weight	1/2 oz. (14 g)
Installation location	SI4548-US-10 / SI5048-US / SI6048-US-10

