



 **FLEXpower™ ONE**

System Overview

Contents

System Overview –

Recommended Wire Sizes and Torque Requirements.....	1
---	---

Application Overviews –

On-Grid Applications.....	2
Grid-Interactive Applications.....	3
Off-Grid Applications.....	4

Wiring Overviews –

On-Grid Applications (with FLEXnet DC).....	5
On-Grid Applications	6
Off-Grid Applications (with FLEXnet DC).....	7
Off-Grid Applications	8



WARNING: SHOCK HAZARD

- This information is for use by qualified personnel who meet all local and governmental code requirements for licensing and training for the installation of electrical power systems with AC and DC voltage up to 240 Vac and 150 Vdc.
- Consult the *FLEXpower ONE Installation Manual* for detailed information on **safety** and **installation** procedures.

Major Components

OutBack Power Technologies Products:

- Inverter/Charger (FX, VFX, GVFX or GTFX models)
- FW250-AC-120V-NA
- FW250-DC-125, FW250-DC-175, or FW250-DC-250
- System Display and Controller (MATE2 or MATE3)
- Charge Controller (FLEXmax 80 or FLEXmax 60)
- Remote Temperature Sensor (RTS)
- Communications Manager (HUB4 or HUB10)
- FLEXnet DC Monitor
- Surge Protector

Customer Supplied Components:


- AC Source:
 - ~ Utility Grid (if available) or
 - ~ AC Generator with circuit breaker or overcurrent device
- Main AC Distribution Panel
- AC Distribution Sub-Panel (Load Panel)
- Battery Bank (24 or 48 Vdc)
- Photovoltaic (PV) Array and PV Combiner Box

Reference Documentation:

- FLEXpower ONE Installation Manual
- FX Inverter/Charger Installation Manuals
- FX Operator's Manuals
- MATE Series or MATE3 Owner's Manual
- HUB Owner's Manual
- FLEXmax Series Charge Controllers Owner's Manual
- FLEXnet DC Monitor Owner's Manual

IMPORTANT:

All configurations must comply with local and national electric codes. Consult your local electric authority to ensure compliance. Actual wiring requirements may vary. Factory wiring is not shown.

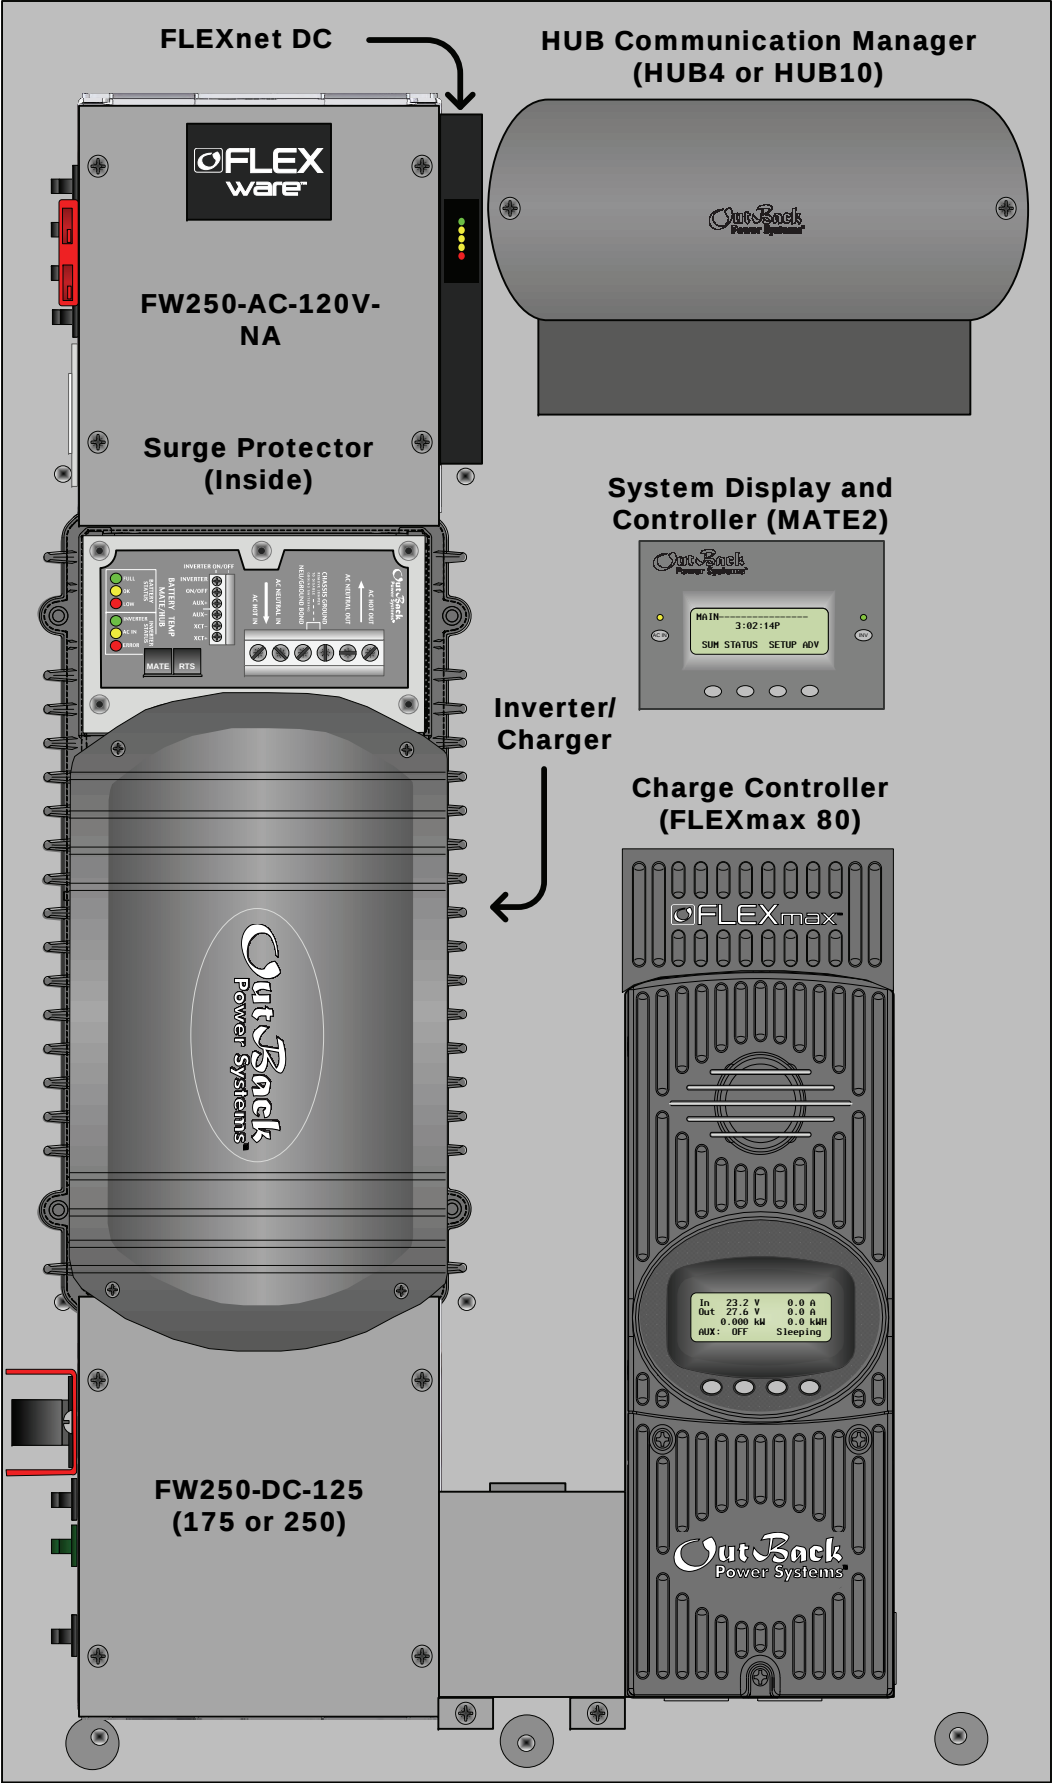

AC Wire Sizes and Torque Values

Wire Size		Torque	
AWG	mm ²	In-lb	Nm
#14 - 10	2.5 - 6	20	2.3
#8	10	25	2.8
#6 - 4	16 - 25	35	4.0
#3	35	35	4.0
#2	35	40	4.5
#1	50	50	5.6
1/0	70	50	5.6

It is recommended that conductors be #6 AWG THHN copper, or larger, rated to 75 °C (minimum) unless local code requires otherwise.

Torque Data for Breaker Lugs


Breaker Stud	Torque	
	In-lb	Nm
M8	20	2.3
1/4 - 20	35	4.0
5/16 - 18	50	5.6
3/8 - 16	225	25.4

Minimum DC Conductor based on DC Breaker


DC Breaker	Conductor Size	Torque	
		In-lb	Nm
125	1/0 (70 mm ²)	50	5.6
175	2/0 (70 mm ²)	225	25.4
250	4/0 (120 mm ²)	225	25.4

IMPORTANT:
Not intended for use with life support equipment.



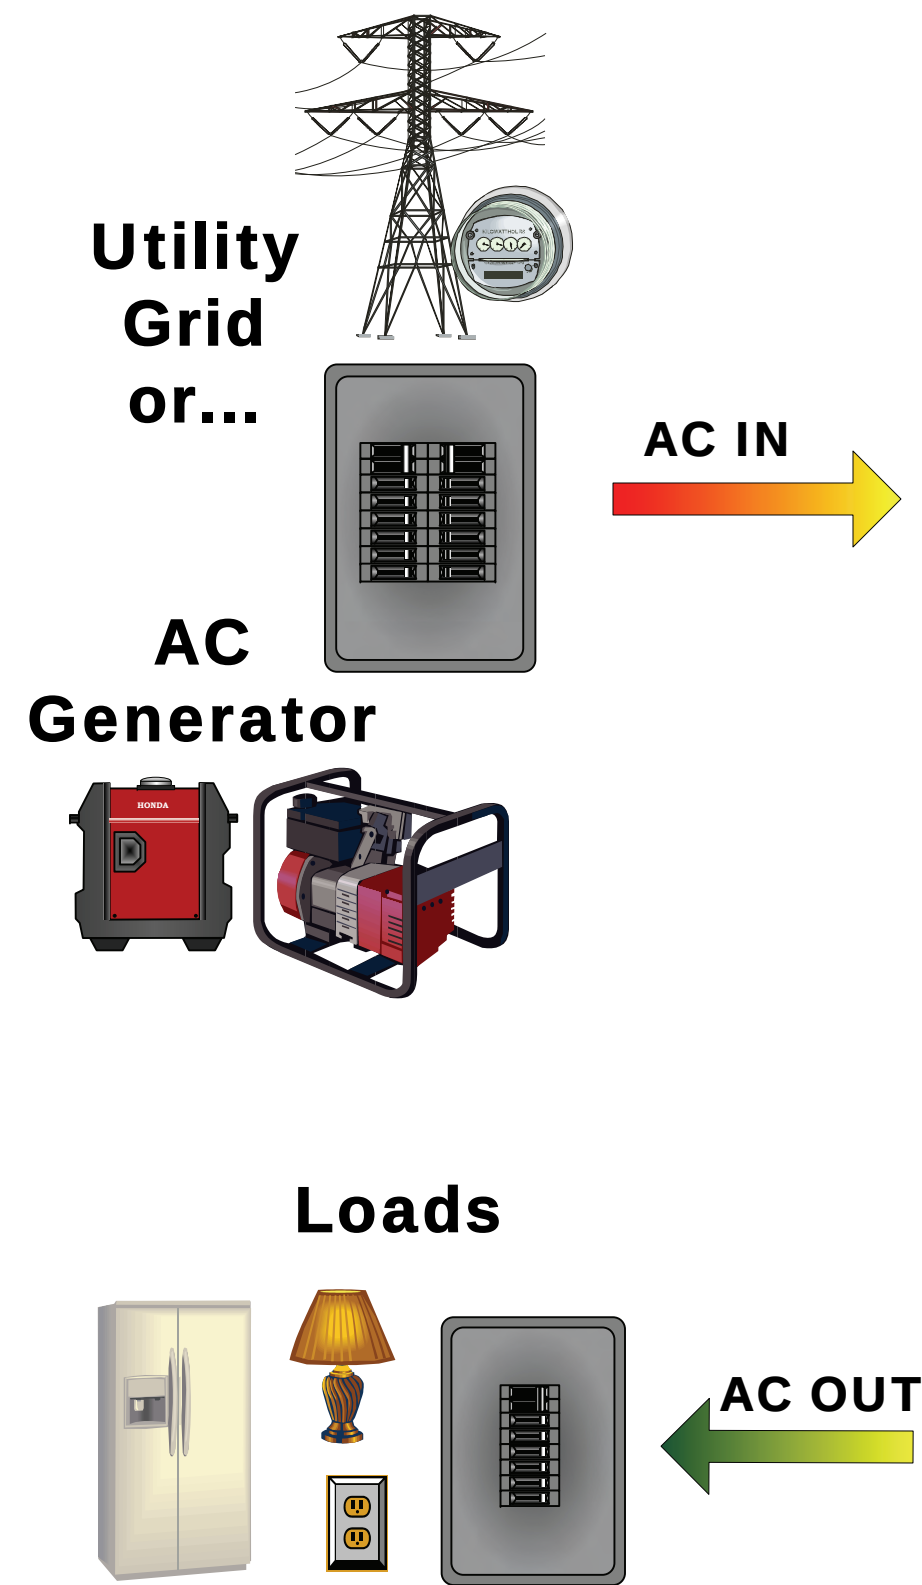


IMPORTANT: Example only. Actual configuration will vary depending on the specific installation requirements.

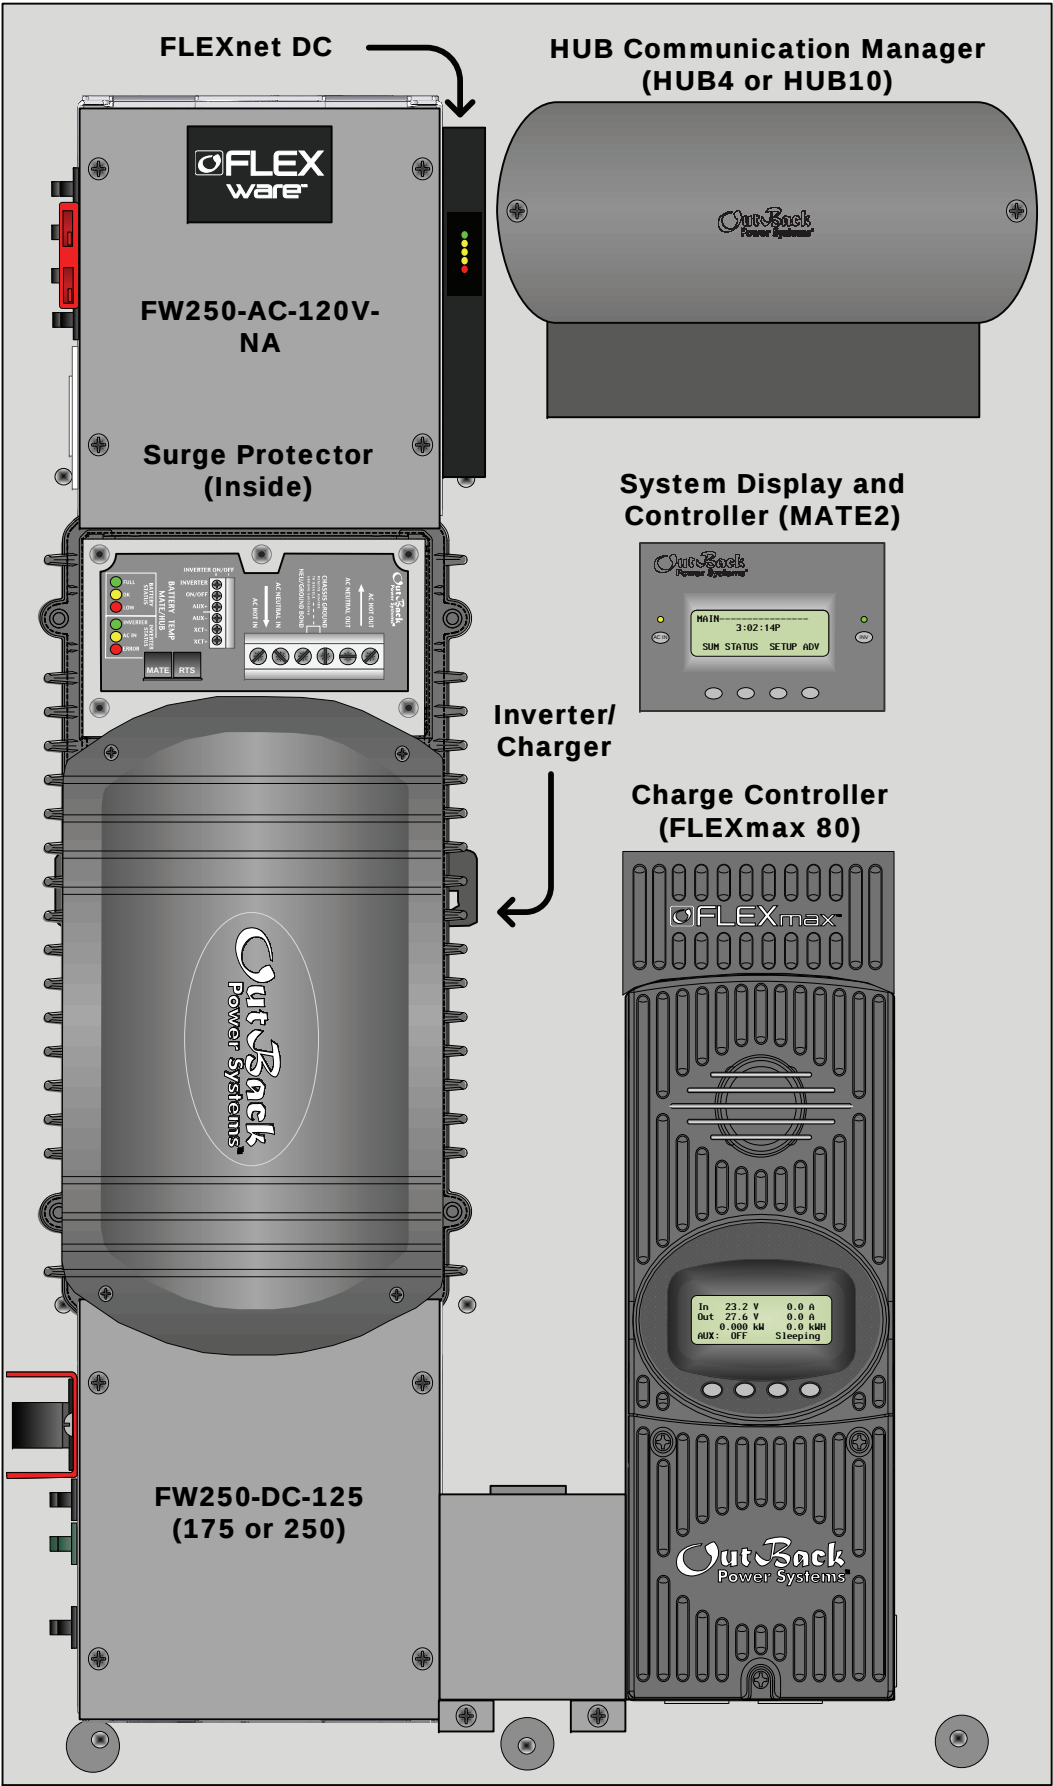


Major Components


- OutBack Power System Products:**
- Inverter/Charger (FX or VFX models)
 - FW250-AC-120V-NA
 - FW250-DC-125, FW250-DC-175, or FW250-DC-250
 - System Display and Controller (MATE2 or MATE3)
 - Charge Controller (FLEXmax 80 or FLEXmax 60)
 - Remote Temperature Sensor (RTS)
 - Communications Manager (HUB4 or HUB10)
 - FLEXnet DC Monitor
 - Surge Protector
- Customer Supplied Components:**
- AC Source:
 - ~ Utility Grid AC or
 - ~ AC Generator with circuit breaker or overcurrent device
 - Main AC Distribution Panel
 - AC Distribution Sub-Panel (Load Panel)
 - Battery Bank (24 or 48 Vdc)
 - Photovoltaic (PV) Array

Renewable Energy (RE)


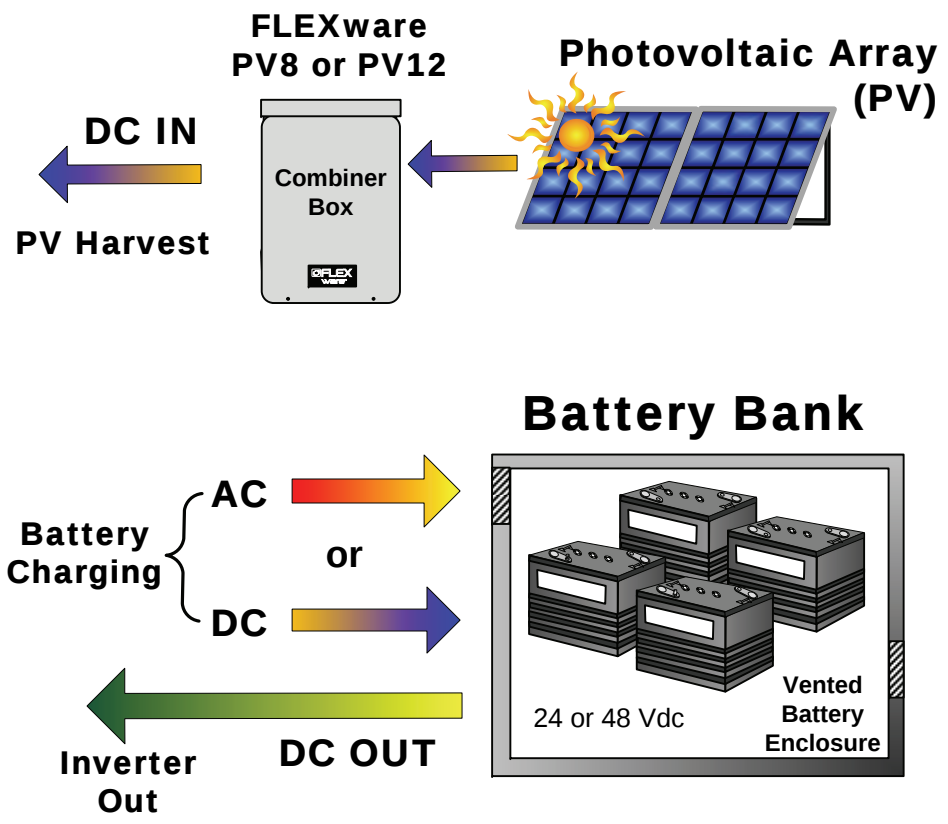


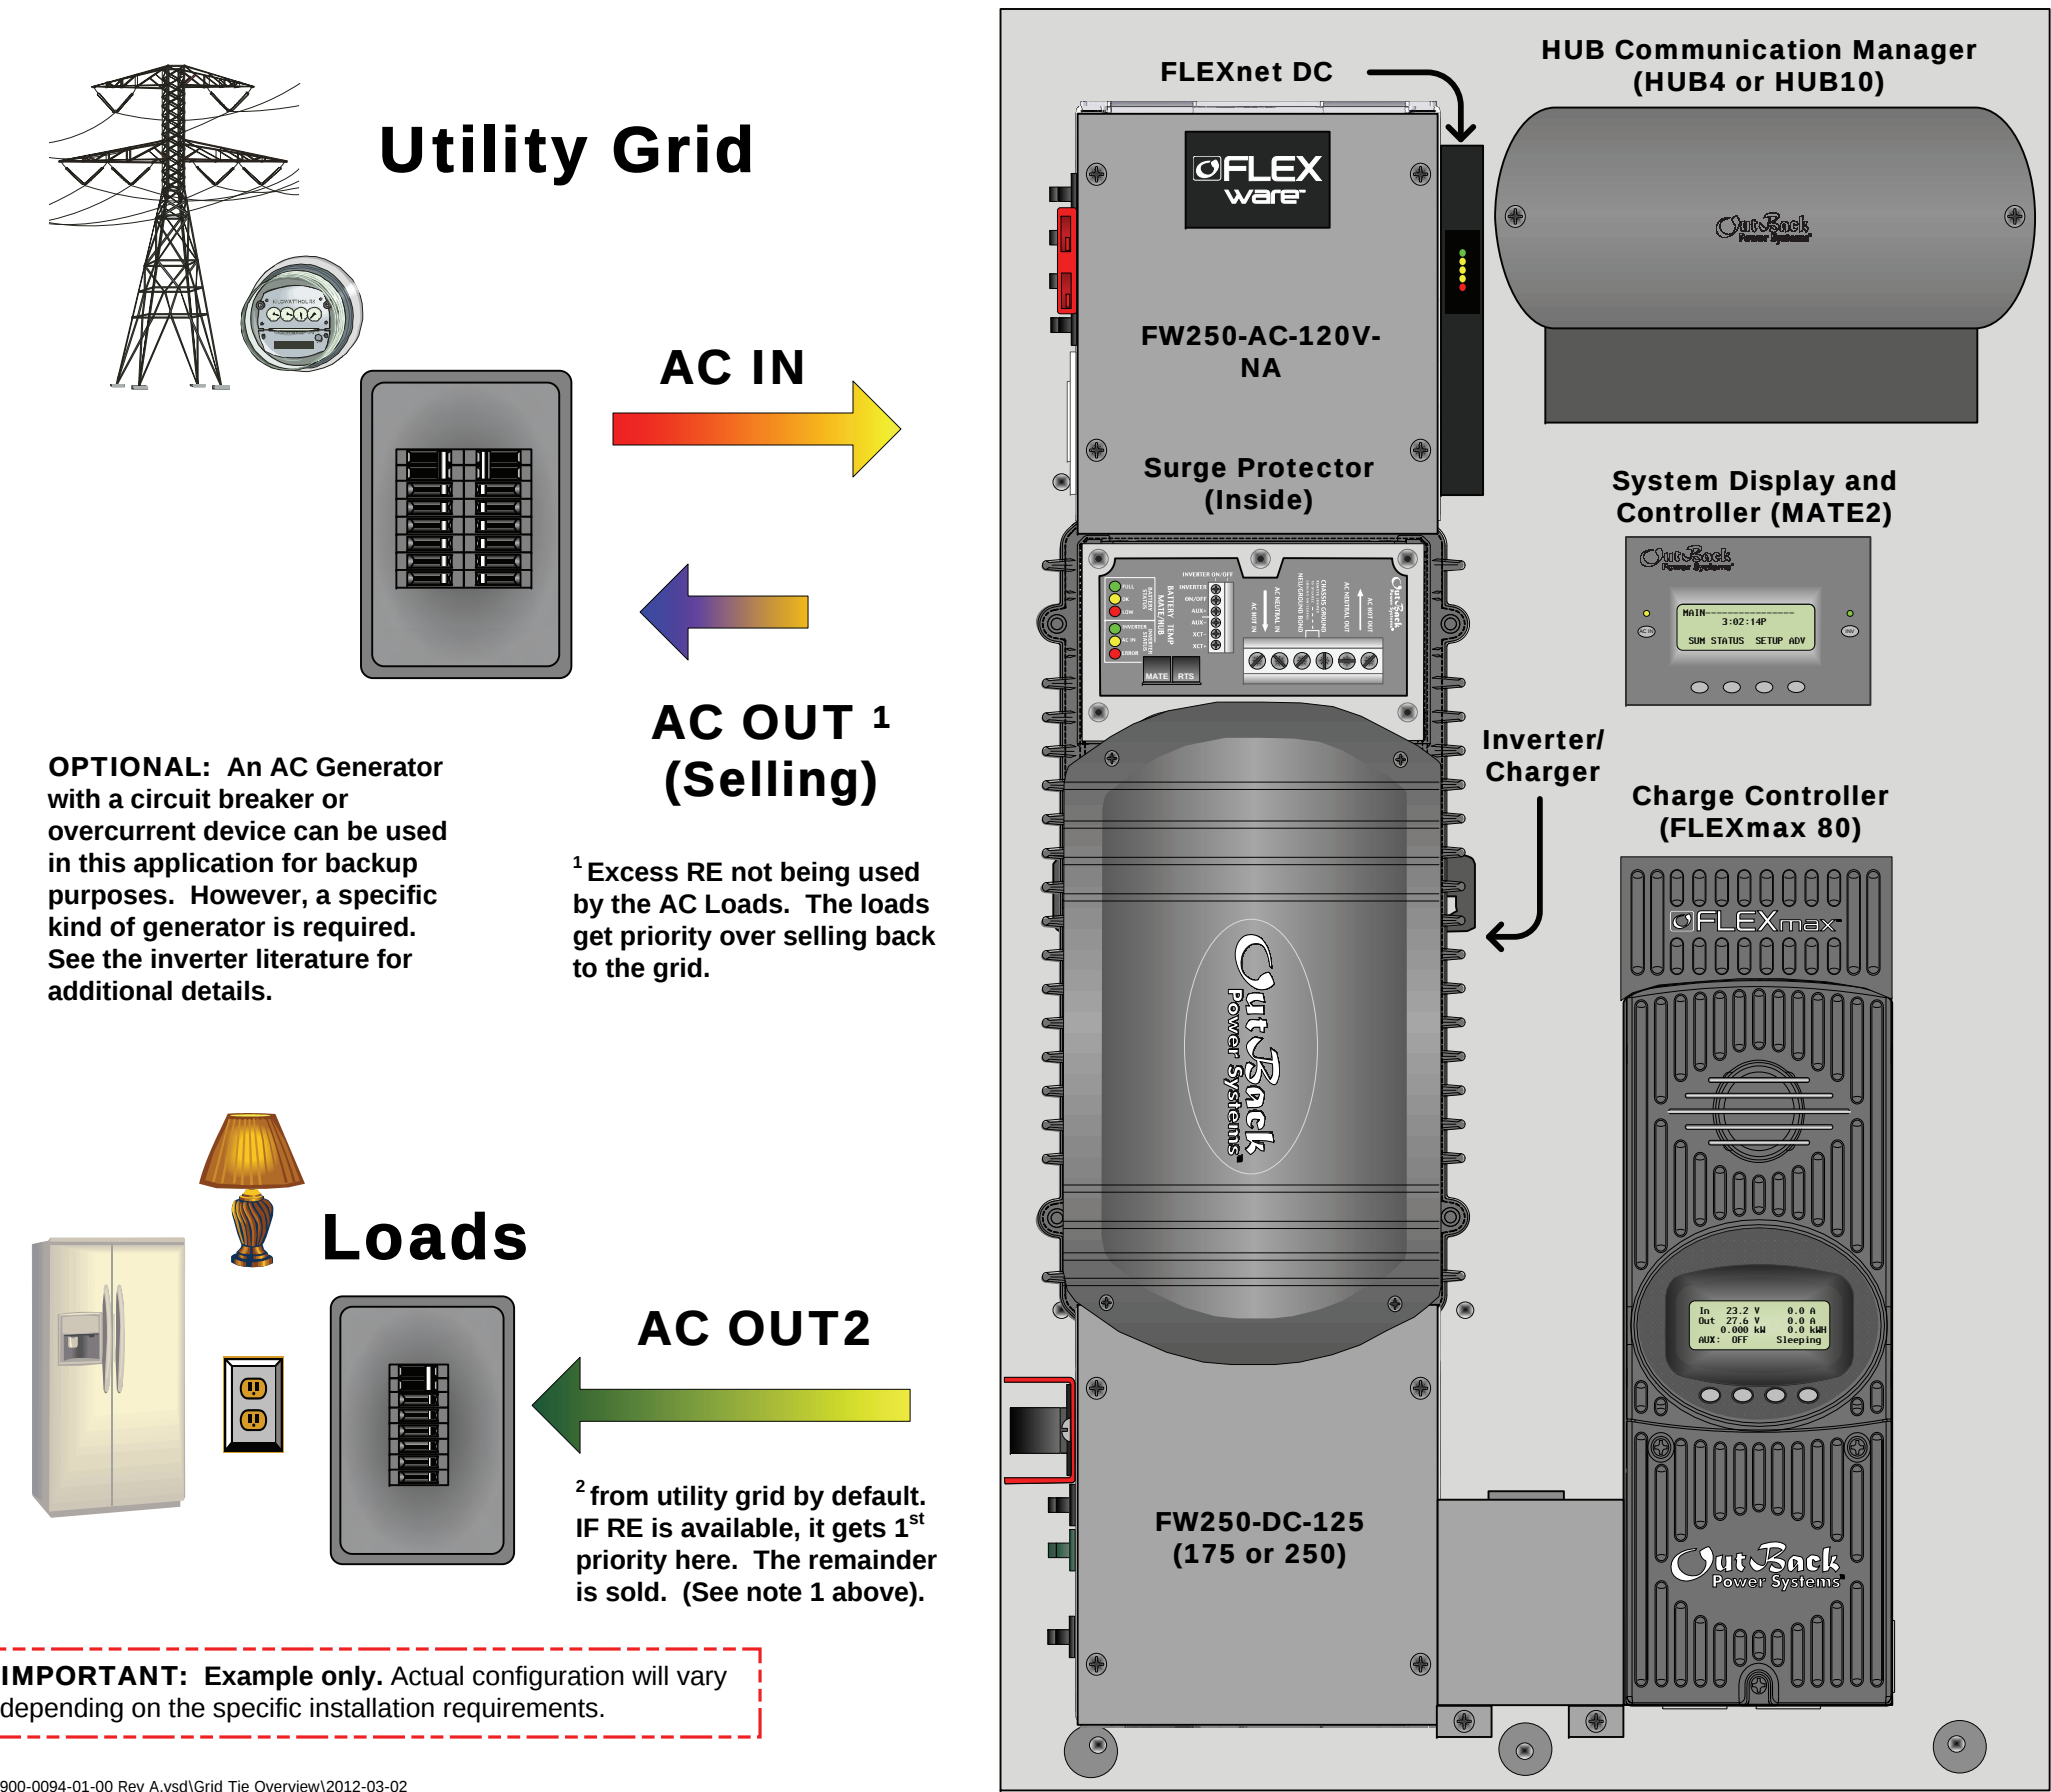


- ### Major Components
- OutBack Power System Products:**
- Inverter/Charger (GVFX or GTFX models only)
 - FW250-AC-120V-NA
 - FW250-DC-125, FW250-DC-175, or FW250-DC-250
 - System Display and Controller (MATE2 or MATE3)
 - Charge Controller (FLEXmax 80 or FLEXmax 60)
 - Remote Temperature Sensor (RTS)
 - Communications Manager (HUB4 or HUB10)
 - FLEXnet DC Monitor
 - Surge Protector
- Customer Supplied Components:**
- AC Source:
 - ~ Utility Grid AC
 - Main AC Distribution Panel
 - AC Distribution Sub-Panel (Load Panel)
 - Battery Bank (24 or 48 Vdc)
 - Photovoltaic (PV) Array

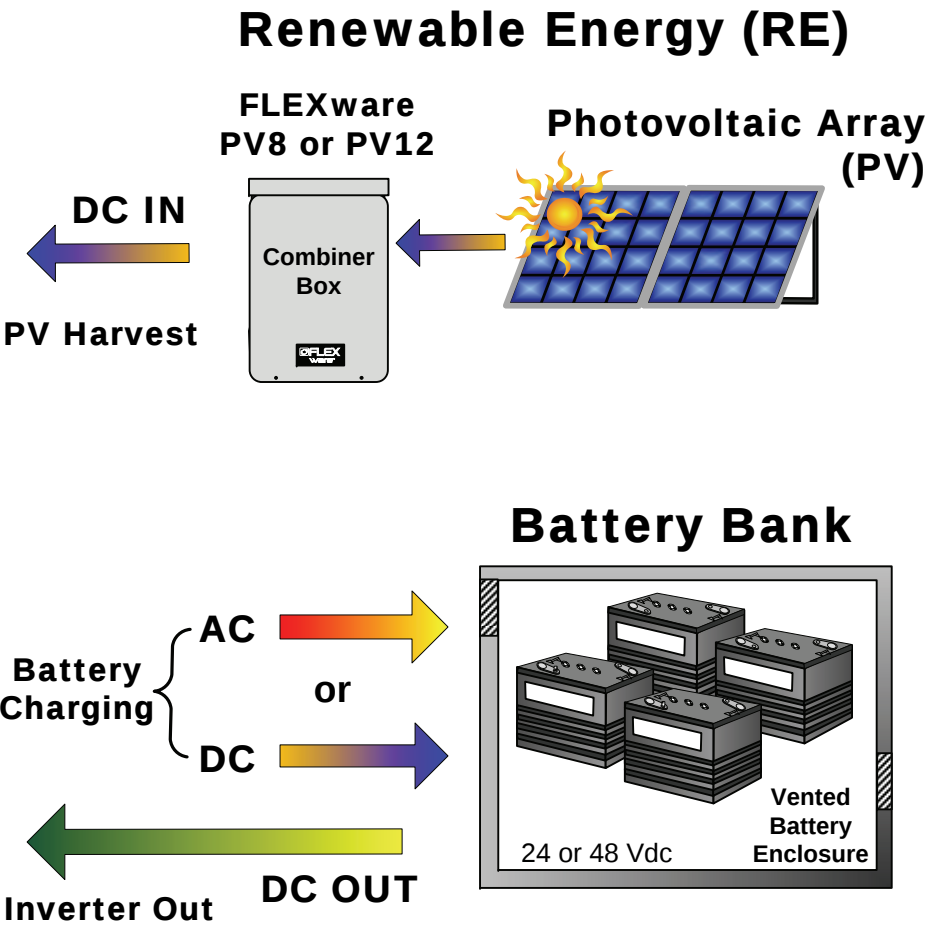

AC Generator or

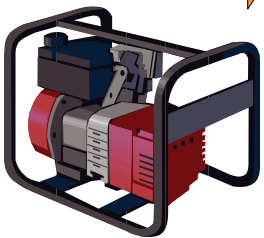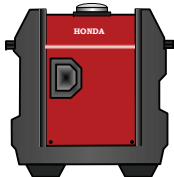


Circuit Breaker or Overcurrent Device

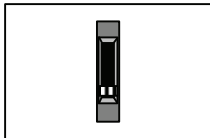


AC IN



Loads

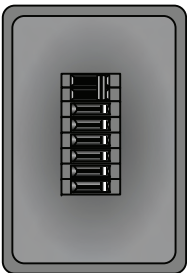

AC OUT

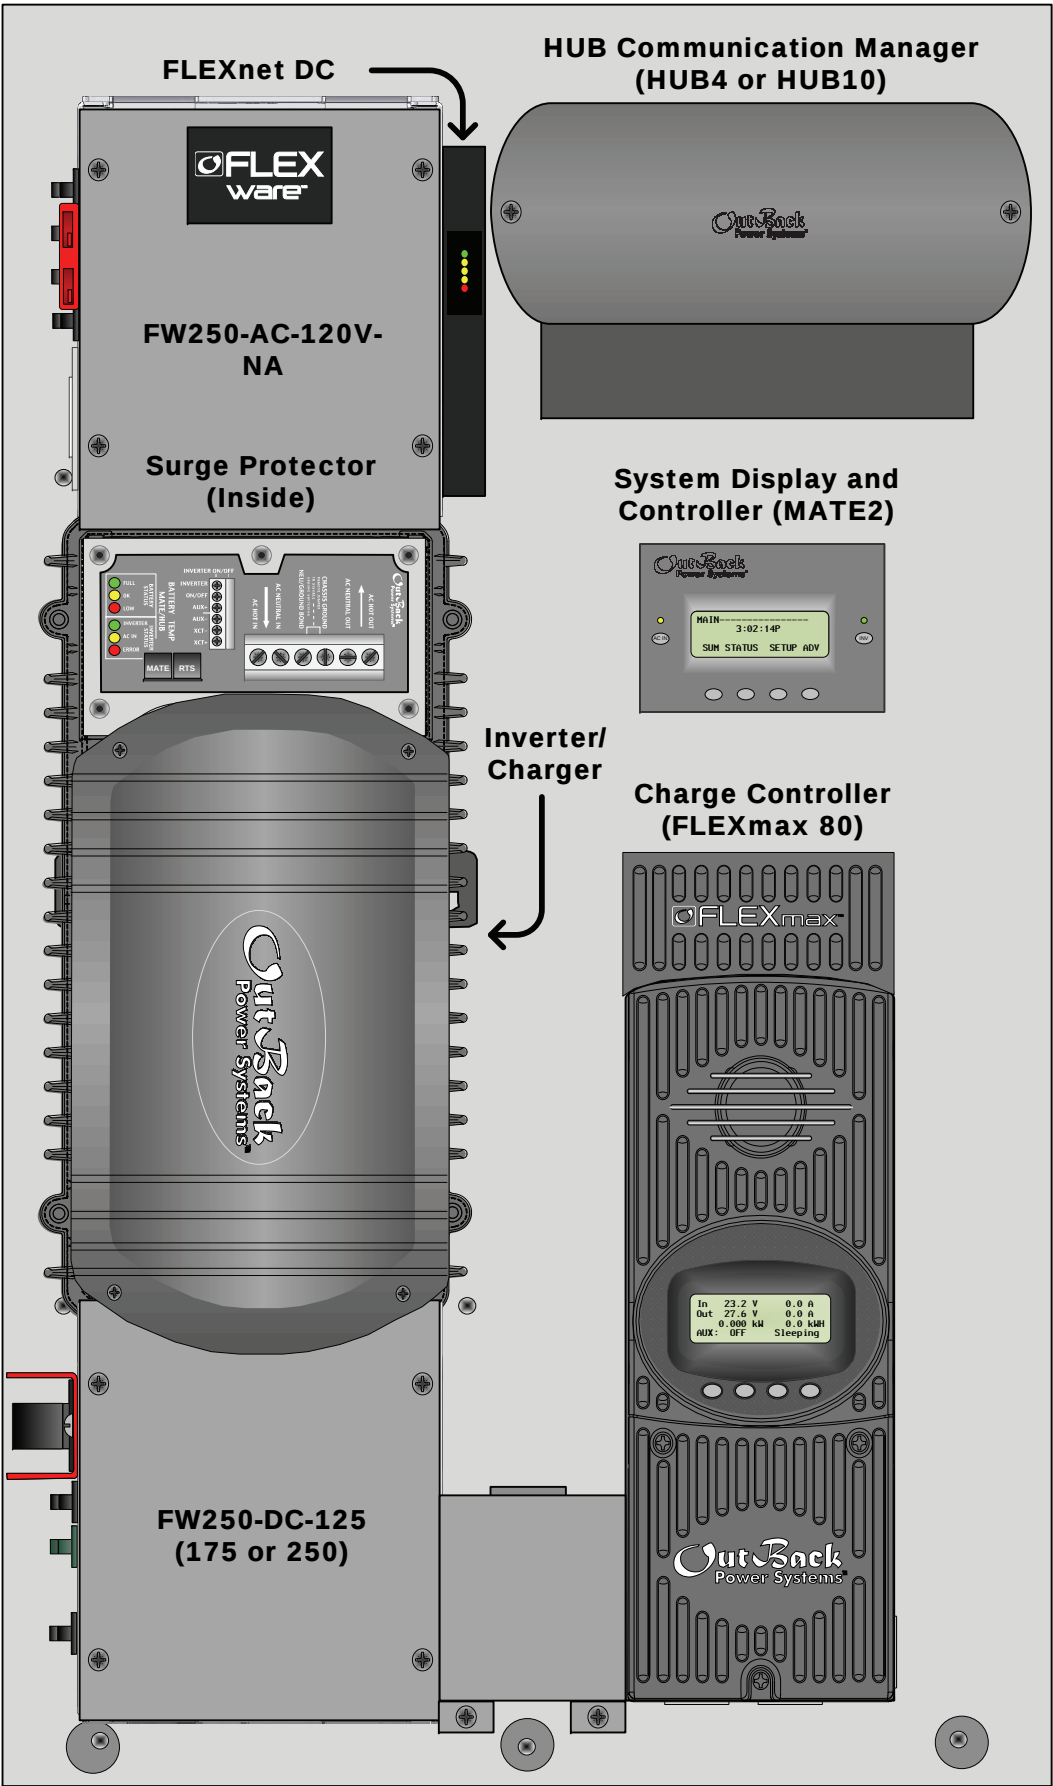

Major Components



OutBack Power System Products:

- Inverter/Charger (FX or VFX models)
- FW250-AC-120V-NA
- FW250-DC-125, FW250-DC-175, or FW250-DC-250
- System Display and Controller (MATE2 or MATE3)
- Charge Controller (FLEXmax 80 or FLEXmax 60)
- Remote Temperature Sensor (RTS)
- Communications Manager (HUB4 or HUB10)
- FLEXnet DC Monitor
- Surge Protector


Customer Supplied Components:

- AC Source:
 - ~ AC Generator with a circuit breaker or overcurrent device
- AC Distribution Sub-Panel (Load Panel)
- Battery Bank (24 or 48 Vdc)
- Photovoltaic (PV) Array


Renewable Energy (RE)

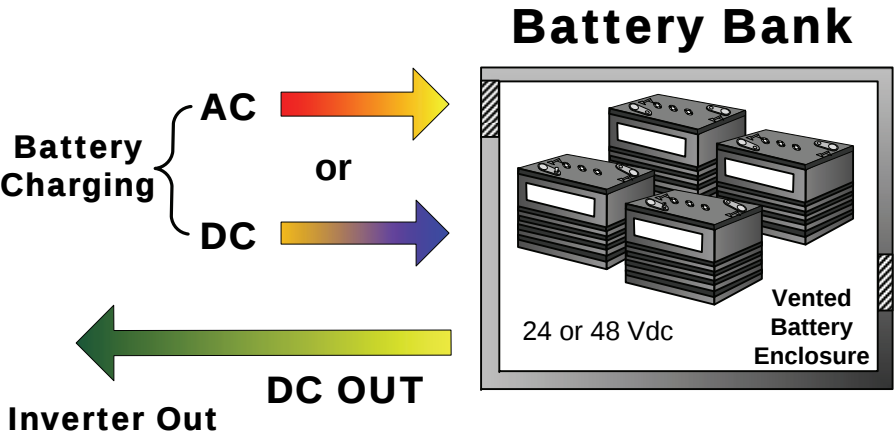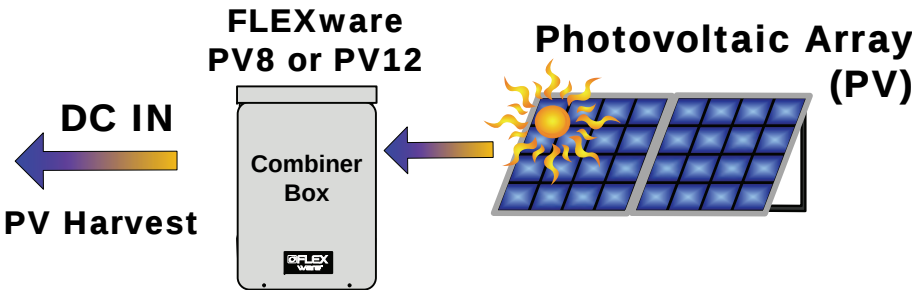


IMPORTANT: Example only. Actual configuration will vary depending on the specific installation requirements.

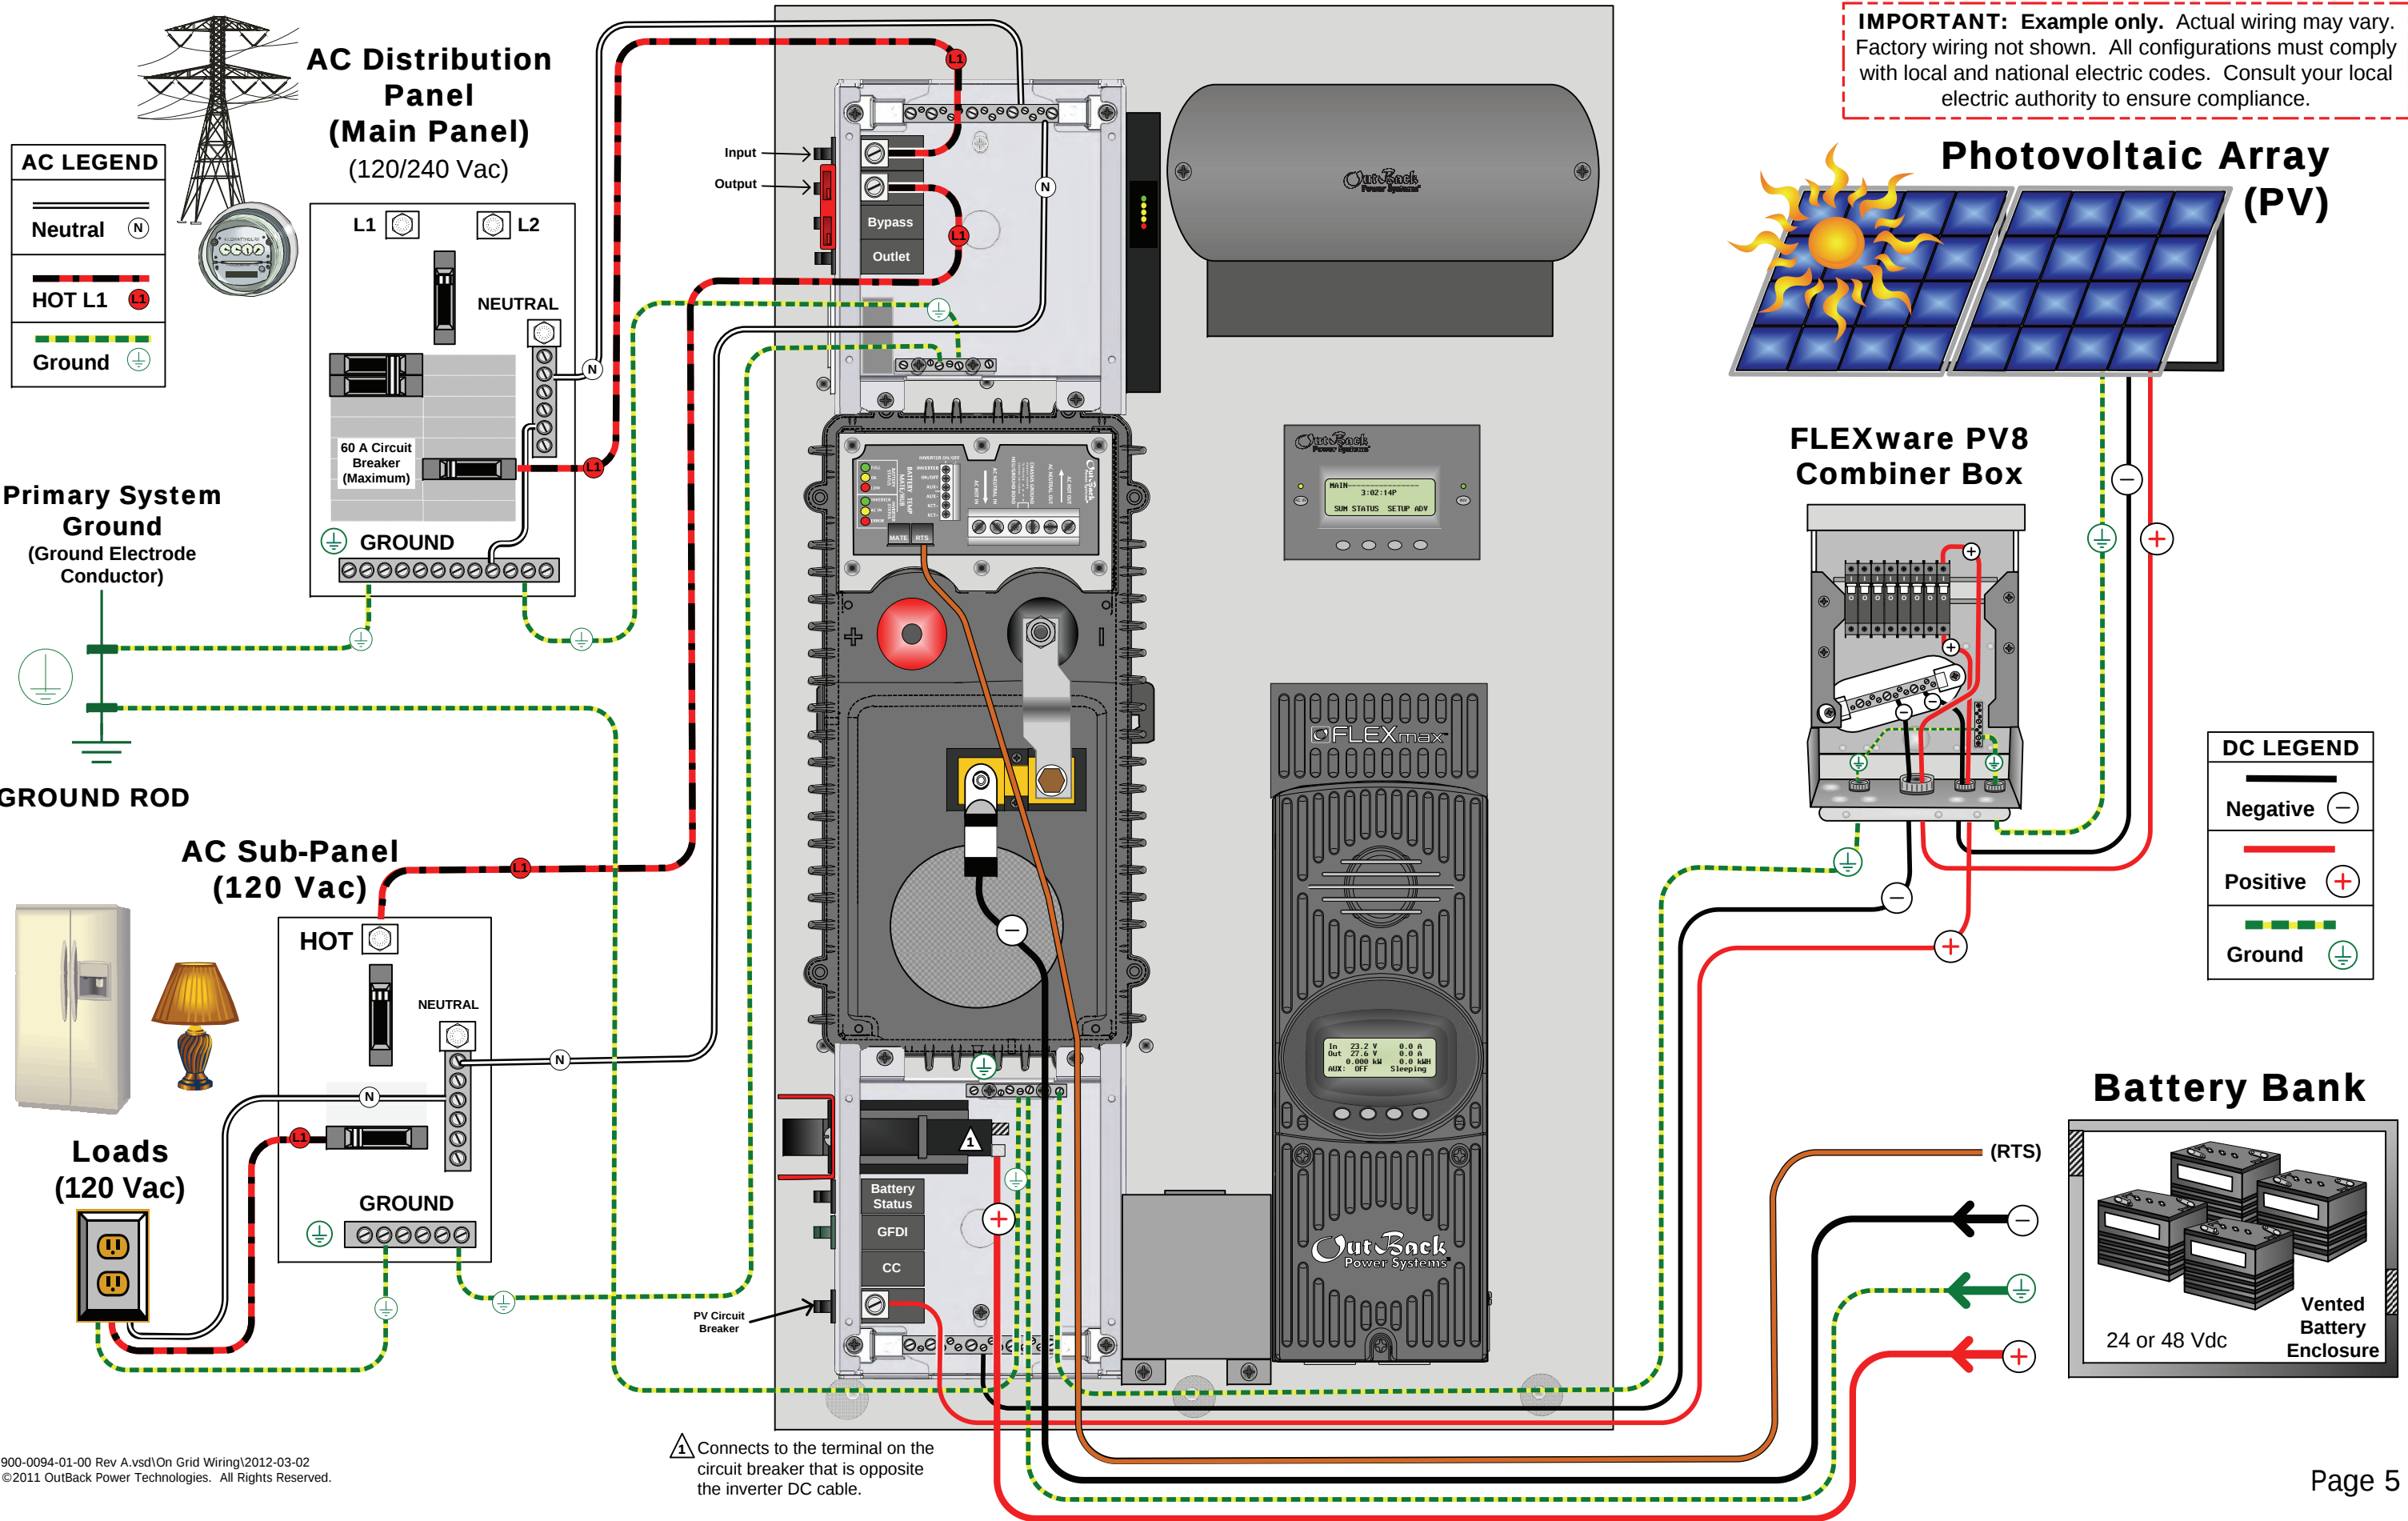

⚠ Connects to the terminal on the circuit breaker that is opposite the inverter DC cable.

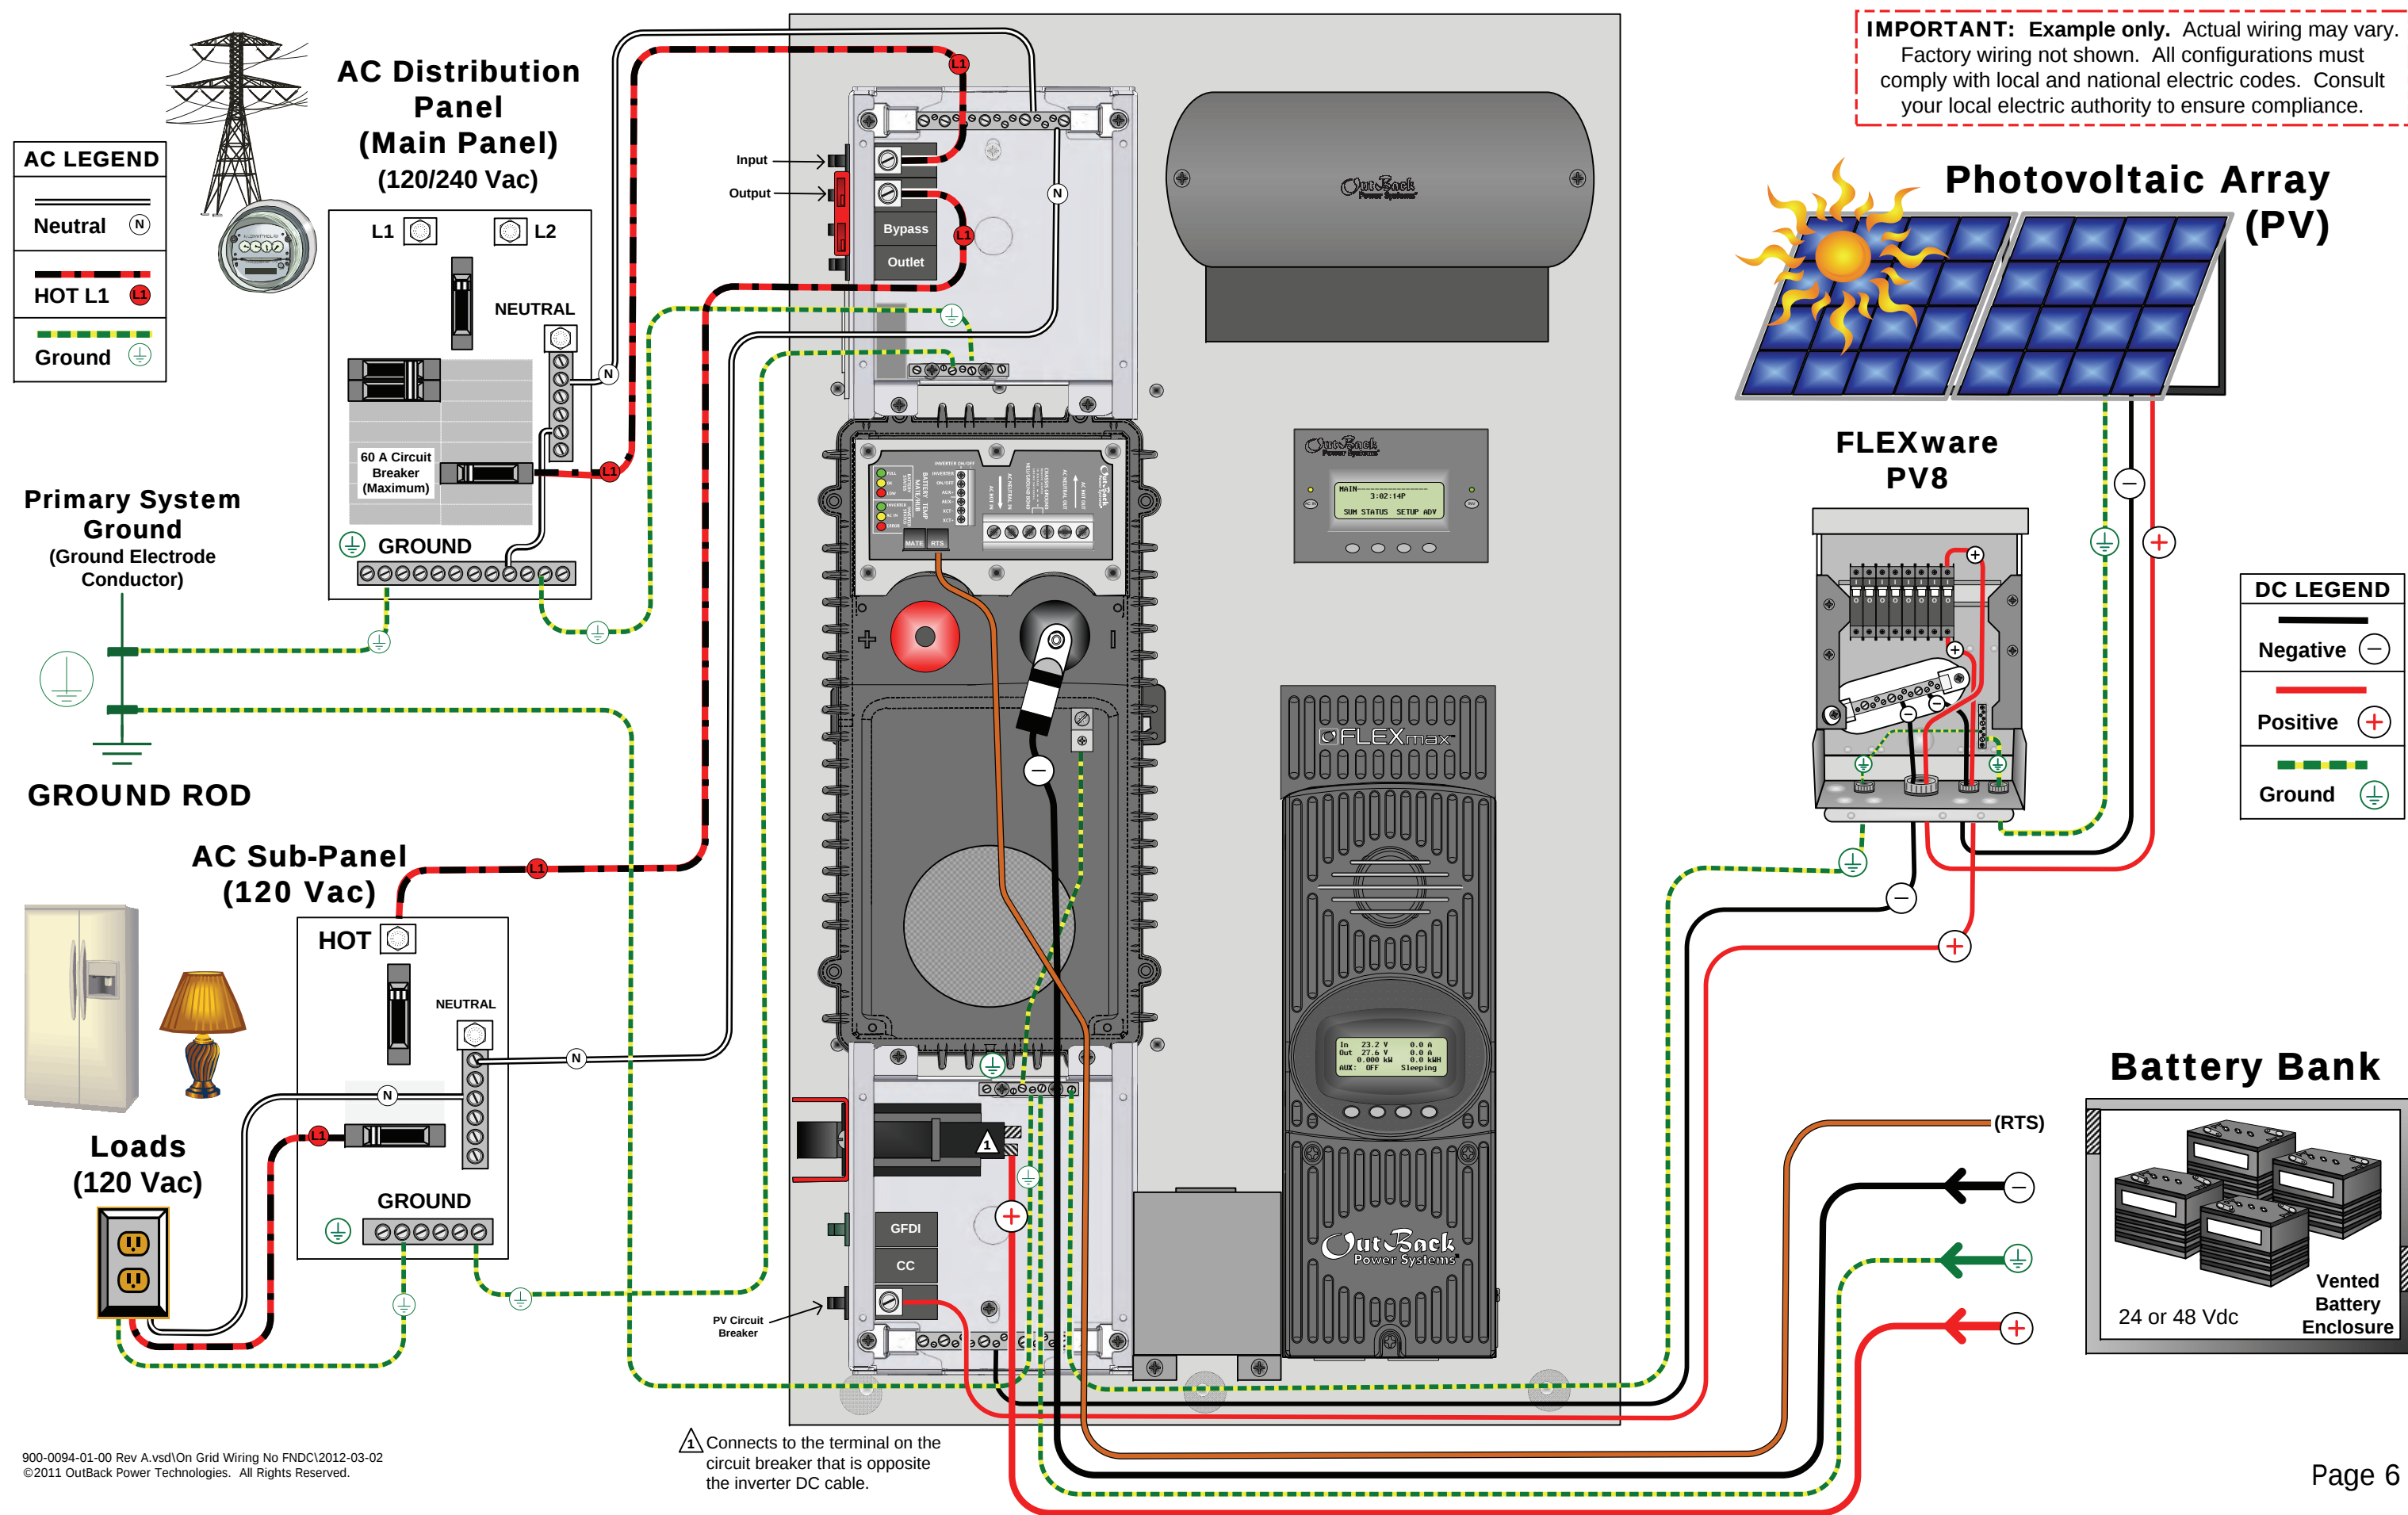



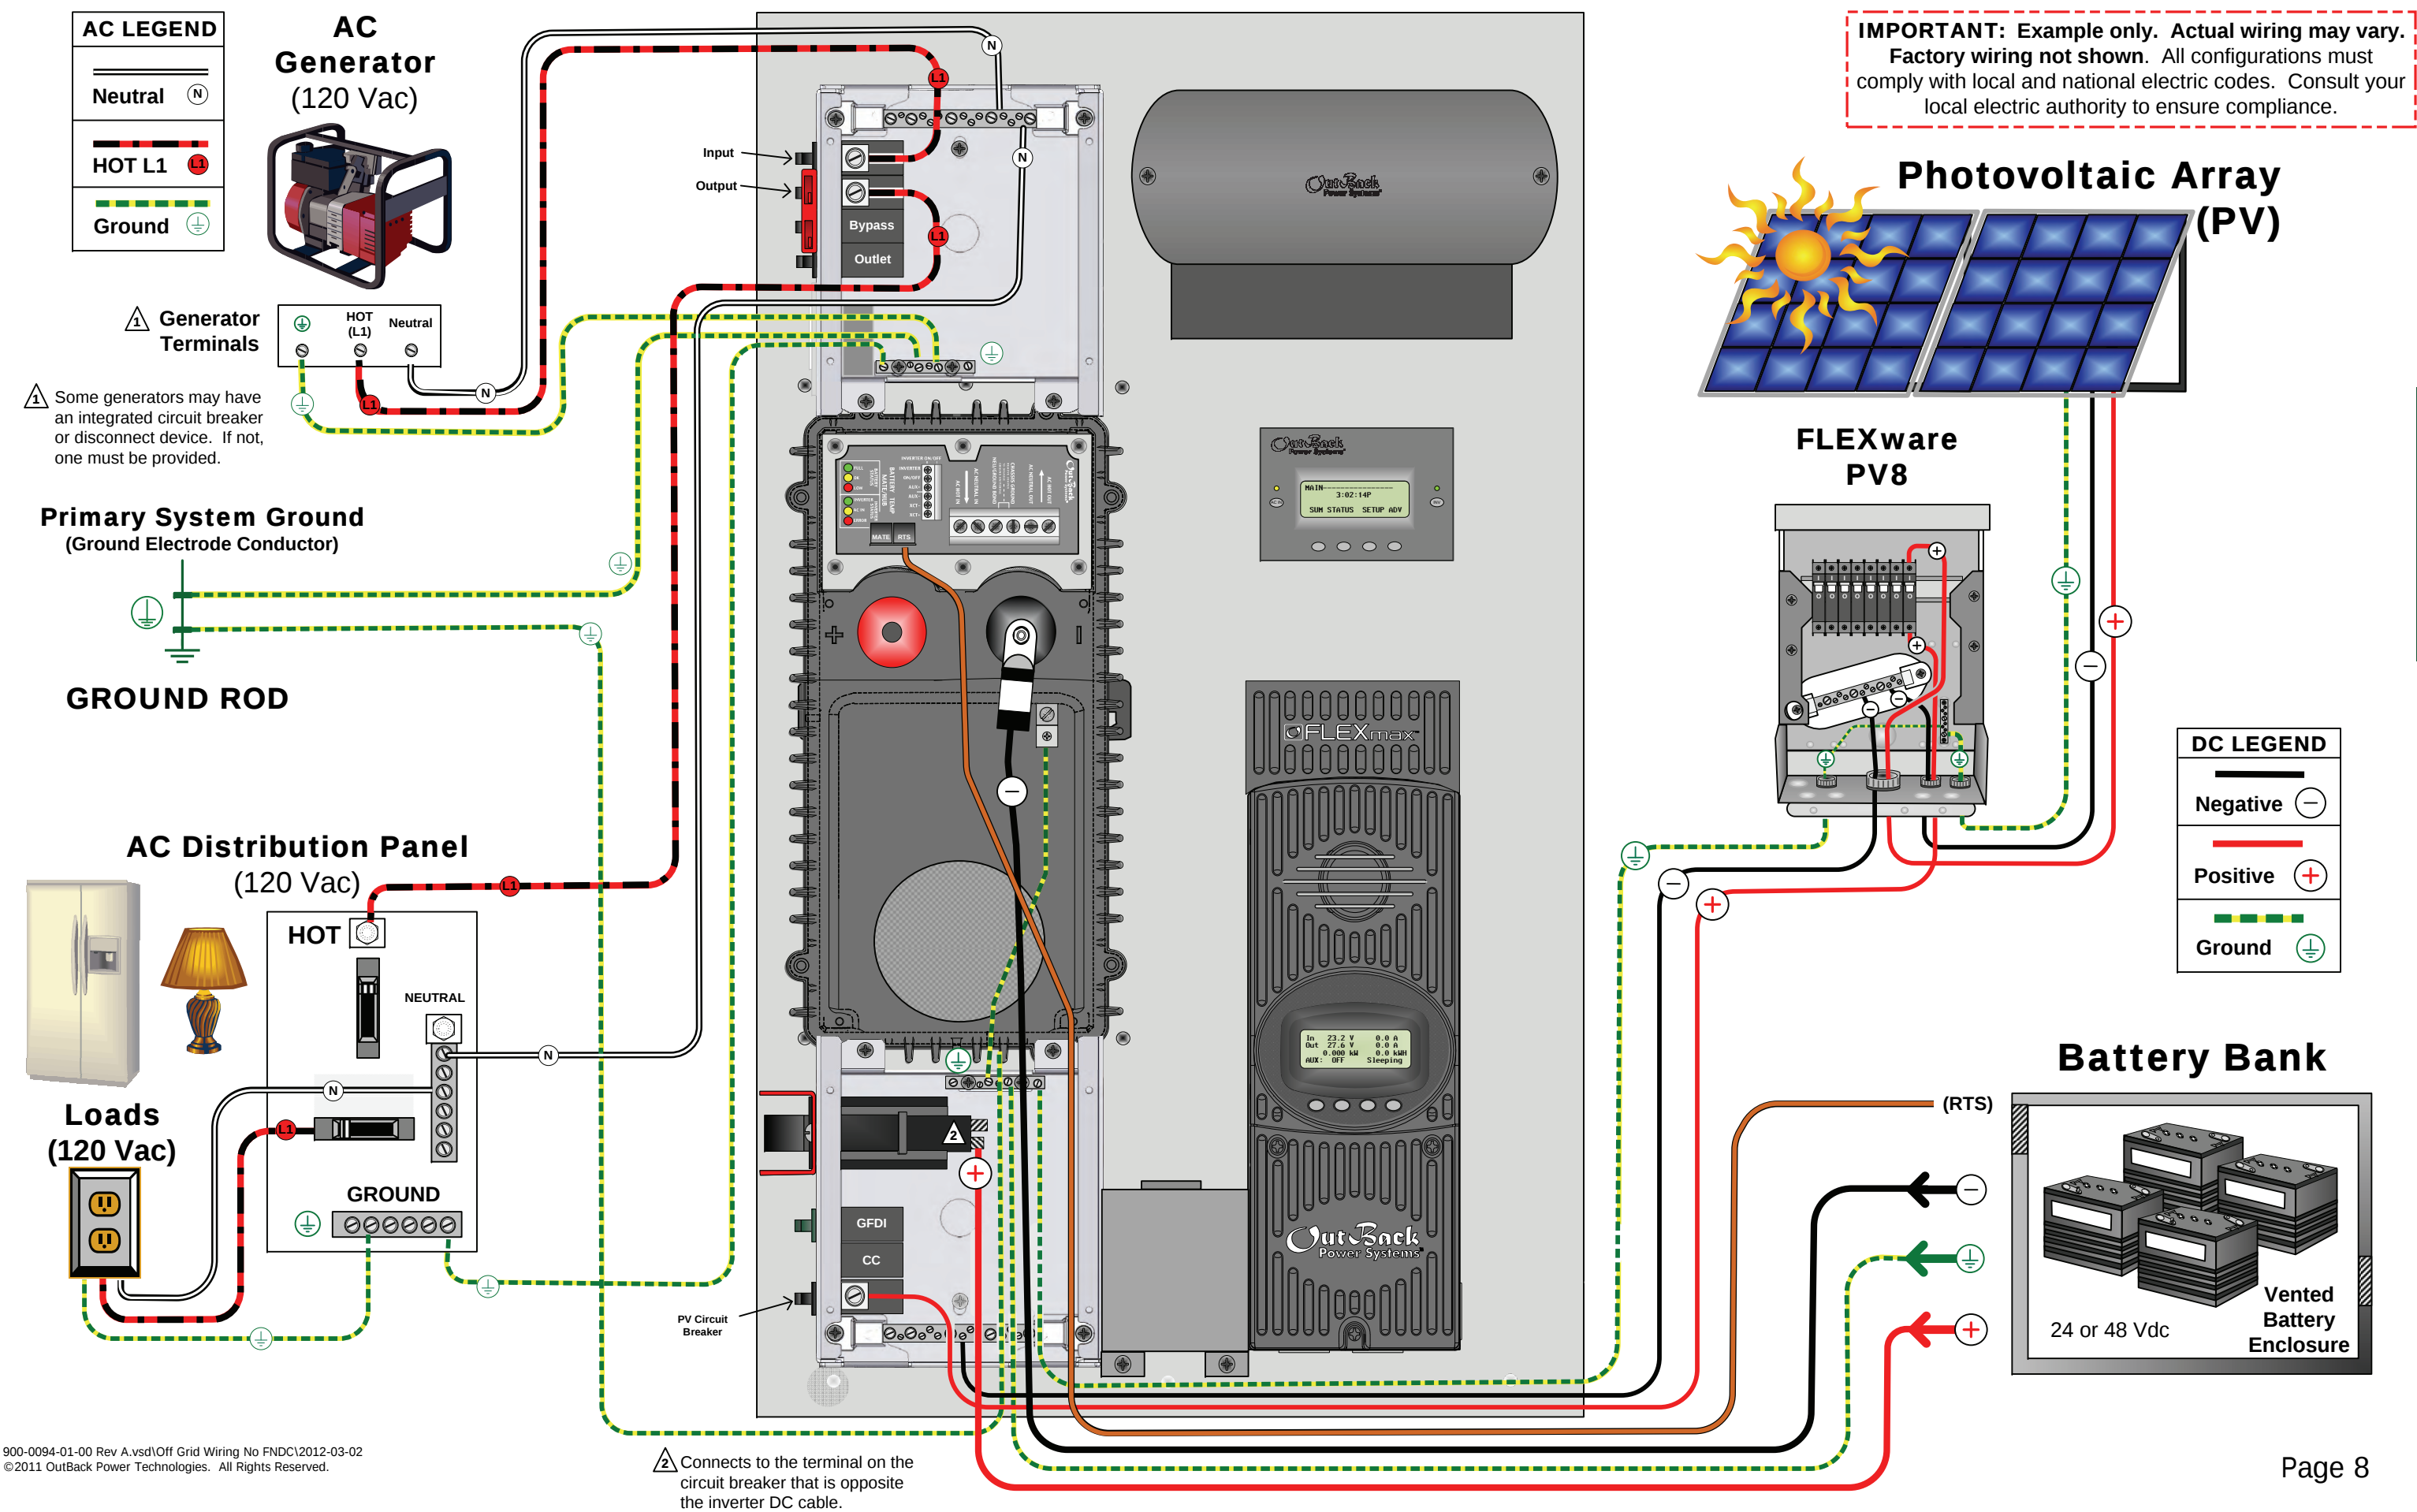

About OutBack Power Technologies

OutBack Power Technologies is a leader in advanced energy conversion technology. Our products include true sine wave inverter/chargers, maximum power point tracking charge controllers, and system communication components, as well as circuit breakers, batteries, accessories, and assembled systems.

Contact Information

Telephone:	+1.360.435.6030 (Main) +1.360.618.4363 (Technical Support) +1.360.435.6019 (Fax)	
Mailing Address:	OutBack Power Technologies 5917 - 195th Street N.E. Arlington, WA 98223 USA	Sales & Marketing 6115 – 192nd Street NE Arlington, WA 98223 USA
E-mail:	Support@outbackpower.com	
Web Site:	www.outbackpower.com	

Disclaimer

UNLESS SPECIFICALLY AGREED TO IN WRITING, OUTBACK POWER TECHNOLOGIES:

(a) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION.

(b) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK.

Warranty Summary

OutBack Power Technologies warrants that the products it manufactures will be free from defects in materials and workmanship for a period of five (5) years subject to the conditions set forth in the warranty detail, found in the product manual.

OutBack Power Technologies cannot be responsible for system failure, damages, or injury resulting from improper installation of their products.

Notice of Copyright

FLEXpower ONE System Overview © January 2012 by OutBack Power Technologies.
All Rights Reserved.

Trademarks

OutBack Power is a registered trademark of OutBack Power Technologies.

Date and Revision

January 2012, Revision A

Part Number

900-0094-01-00 Rev A



North America:
5917 - 195th Street N.E.
Arlington, WA USA
+1.360.435.6030