


Quickstart Guide

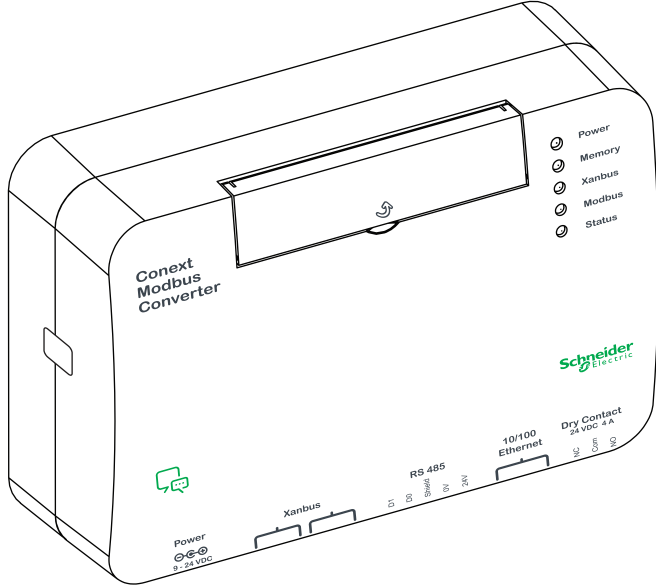

Communication and Monitoring Device

Introduction

The Conext Modbus Converter is a multi-function communication device that delivers system performance monitoring on Modbus protocol for residential, industrial and telecom energy systems. It provides a communications gateway between a network of Xanbus™-enabled devices and Modbus devices through an RS485 or TCP/IP connection. System operators can also remotely configure the Modbus Converter and monitor performance with third party software packages.

DANGER

HAZARD OF ELECTRIC SHOCK AND FIRE

- Connect only to Safety Extra Low Voltage (SELV) circuits and power sources.
- All wiring must be done by qualified personnel to ensure compliance with all applicable installation codes and regulations.
- For Indoor Use Only.
- Do not disassemble. No user serviceable parts inside.

Failure to follow these instructions will result in death or serious injury.

Exclusion for Documentation

UNLESS SPECIFICALLY AGREED TO IN WRITING, SELLER (A) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION;

(B) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK; AND

(C) REMINDS YOU THAT IF THIS MANUAL IS IN ANY LANGUAGE OTHER THAN ENGLISH, ALTHOUGH STEPS HAVE BEEN TAKEN TO MAINTAIN THE ACCURACY OF THE TRANSLATION, THE ACCURACY CANNOT BE GUARANTEED. APPROVED CONTENT IS CONTAINED WITH THE ENGLISH LANGUAGE VERSION WHICH IS POSTED AT WWW.SCHNEIDER-ELECTRIC.COM.

Conventions Used

A

Section

1

Step

Safety

Direction

Expand

A


Label


Contact Information


www.schneider-electric.com


Please contact your local Schneider Electric Sales Representative or visit the Schneider Electric website at: <http://www.schneider-electric.com/sites/corporate/en/support/operations/local-operations/local-operations.page>


Material List

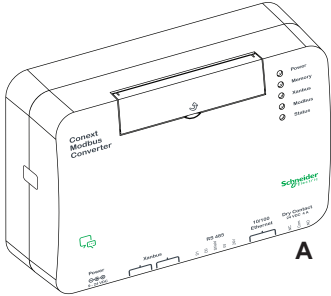

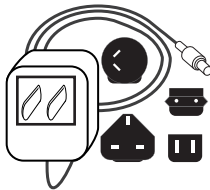

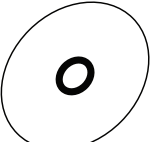

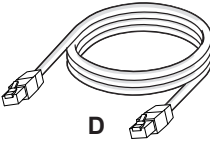












A Modbus Converter unit

B AC/DC adapter\* with changeable plugs

C CD (owner's guide, device discovery tool)

D Ethernet cable

E Xanbus network terminator


F RS 485 Modbus connector (or RS 485 connector)

G Dry contact connector

H Woodscrew #6 with anchor (2)

\* When ordering a replacement, reference PN: 0J-921-0023-Z.

Identification

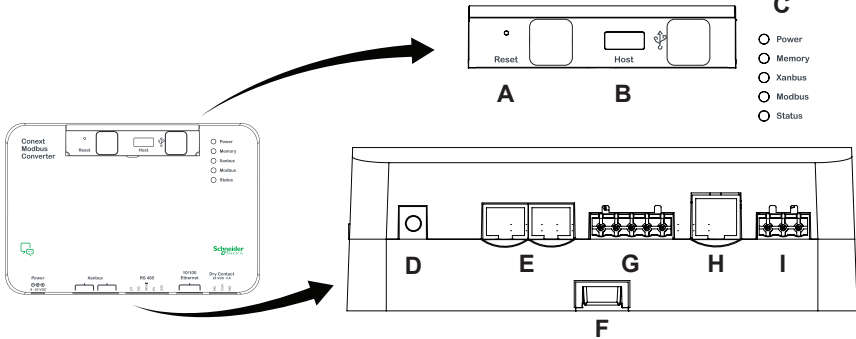

A Reset pinhole

B USB Host port

C LED indicator lights

D Power port

E Xanbus ports

F DIN rail sliding catch

G RS 485 Modbus port (or RS 485 port)


H 10/100 Ethernet port

I Dry contact port

Overview of available power sources

NOTE:


- The Conext Modbus Converter can be powered by all three sources simultaneously. Typically, the AC/DC adapter is used as a primary power source. Xanbus or 24VDC input power through the RS 485 are secondary power sources.
- Do not turn on the Conext Modbus Converter by connecting to either of these power sources until section H1 Turning On the Modbus Converter.

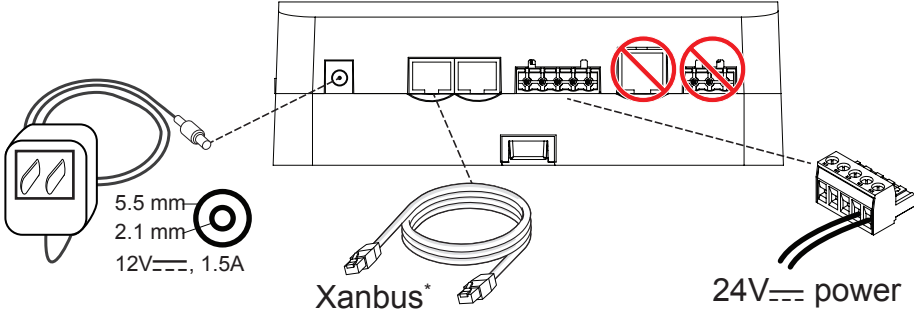


\* For a complete list of Xanbus-enabled devices including devices that can provide power to the Conext Modbus Converter, see the Owner's Guide.

E1 Mounting to a wall


1

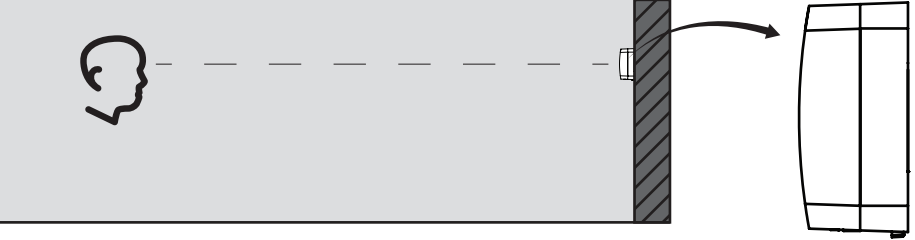


2

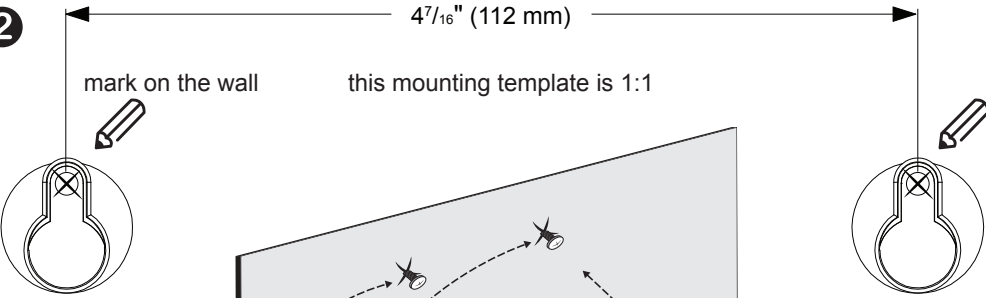

3

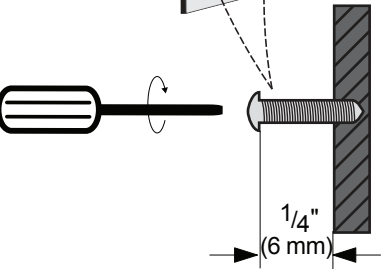

4

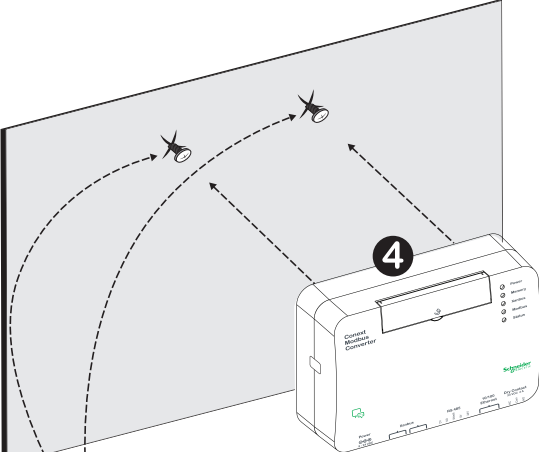

47/16" (112 mm)

mark on the wall

this mounting template is 1:1

#6 screw (supplied)

1/4" (6 mm)


975-0681-01-01 C

10-2013

1




E2 Mounting to a DIN rail

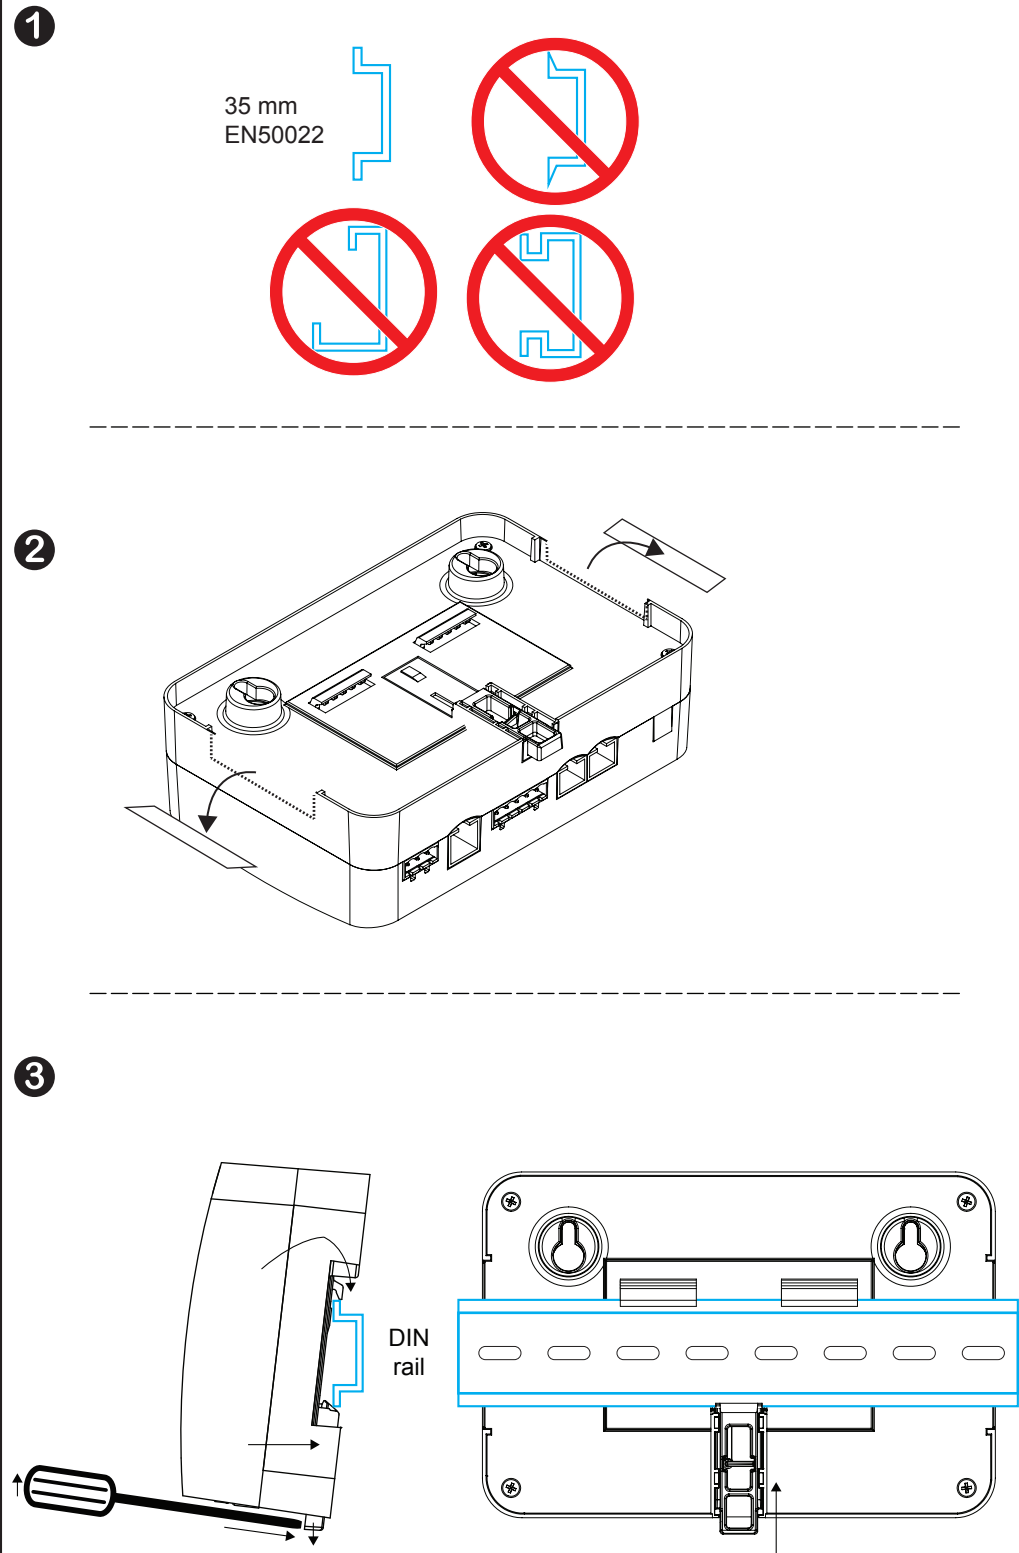

F1 Wiring the RS 485 connector

RS 485 CONNECTOR SPECIFICATIONS

16–24 AWG  
(1.5 mm<sup>2</sup>–0.25 mm<sup>2</sup>) wire  
2-wire serial, 19200 bps

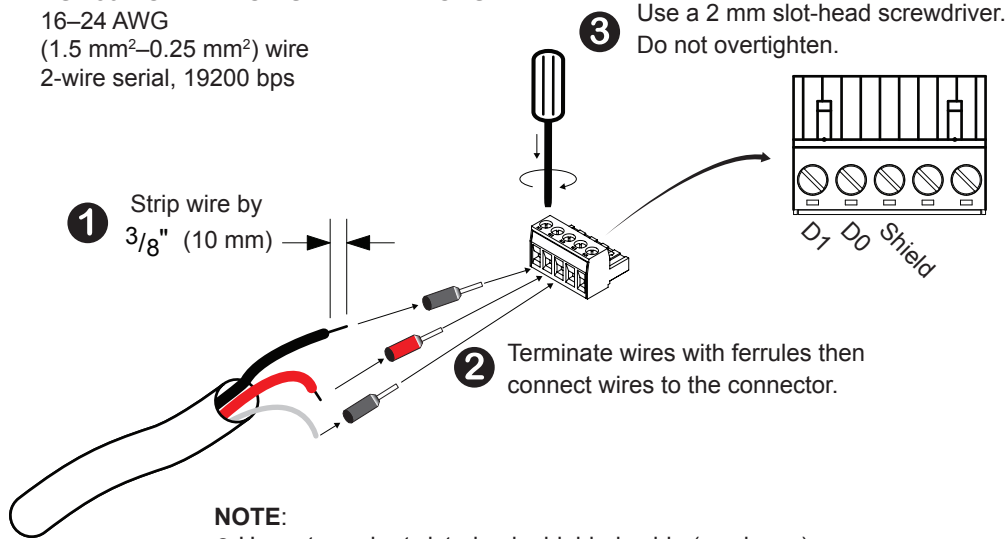

NOTE:

- Use a two-wire twisted pair shielded cable (as shown) or a two-wire twisted pair unshielded cable.
- Refer to local electrical codes and applicable installation codes and regulations.
- Use smaller gauge wires when inserting two wires in one terminal (see F2 Daisy-chaining Modbus devices).

F2 Daisy-chaining Modbus devices

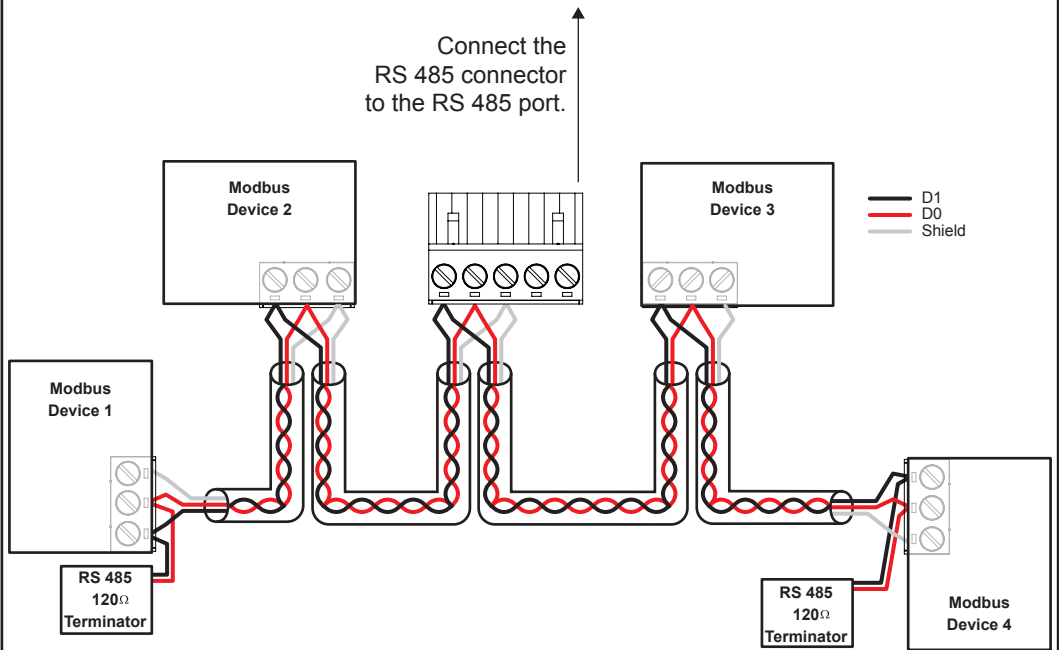


Illustration only. Devices vary and may not require shielded wire.

F3 Wiring the Dry Contact connector

**⚠ DANGER**


HAZARD OF ELECTRIC SHOCK AND FIRE

The Dry contact port must only be connected to a circuit rated 24V<sub>DC</sub> max, 4A max, and supplied from an SELV source.

Failure to follow these instructions will result in death or serious injury.

DRY CONTACT SPECIFICATIONS

16–24 AWG  
(1.5 mm<sup>2</sup>–0.25 mm<sup>2</sup>) wire

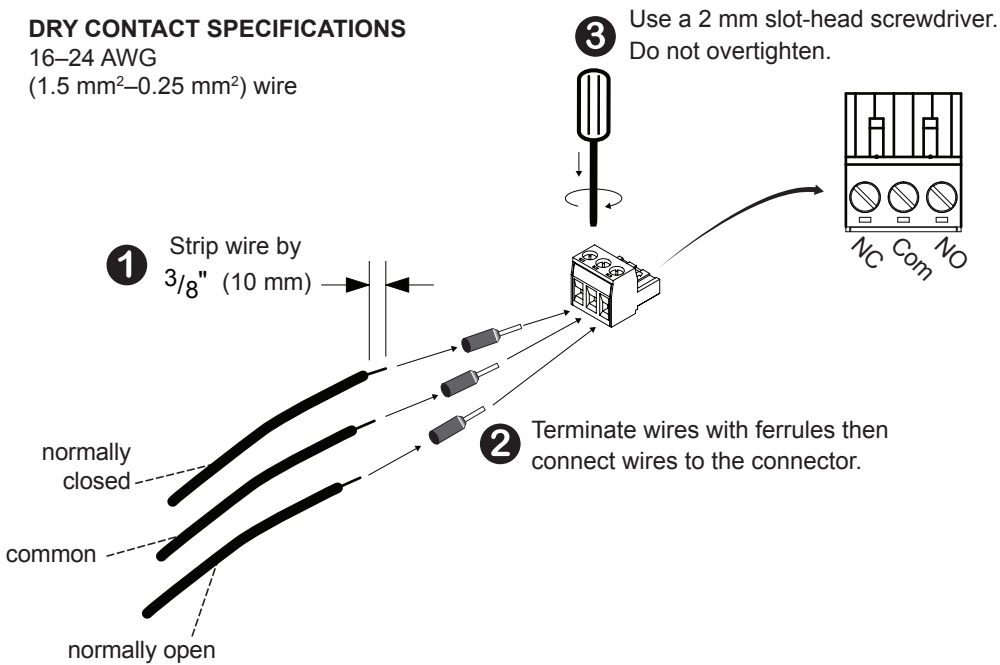



G Connecting to an Ethernet network

NOTICE


EQUIPMENT DAMAGE

- Do not connect an Ethernet cable plug to the MODEM / WAN port of the network router.
- Do not connect an Ethernet cable plug to a Xanbus port of the Conext Modbus Converter.

Failure to follow these instructions can damage equipment.


NOTE:

- The network router must be able to supply DHCP addresses automatically to connected devices. If your network router does not support automatic DHCP, refer to your network router's user guide or contact your system administrator.
- The computer and network router may remain powered at this stage in the process. If not already powered, make sure these two devices are ON before proceeding.
- Follow the connection sequence below. Skip steps 2 and 3 if the computer is connected by Wi-Fi to the Ethernet / LAN.

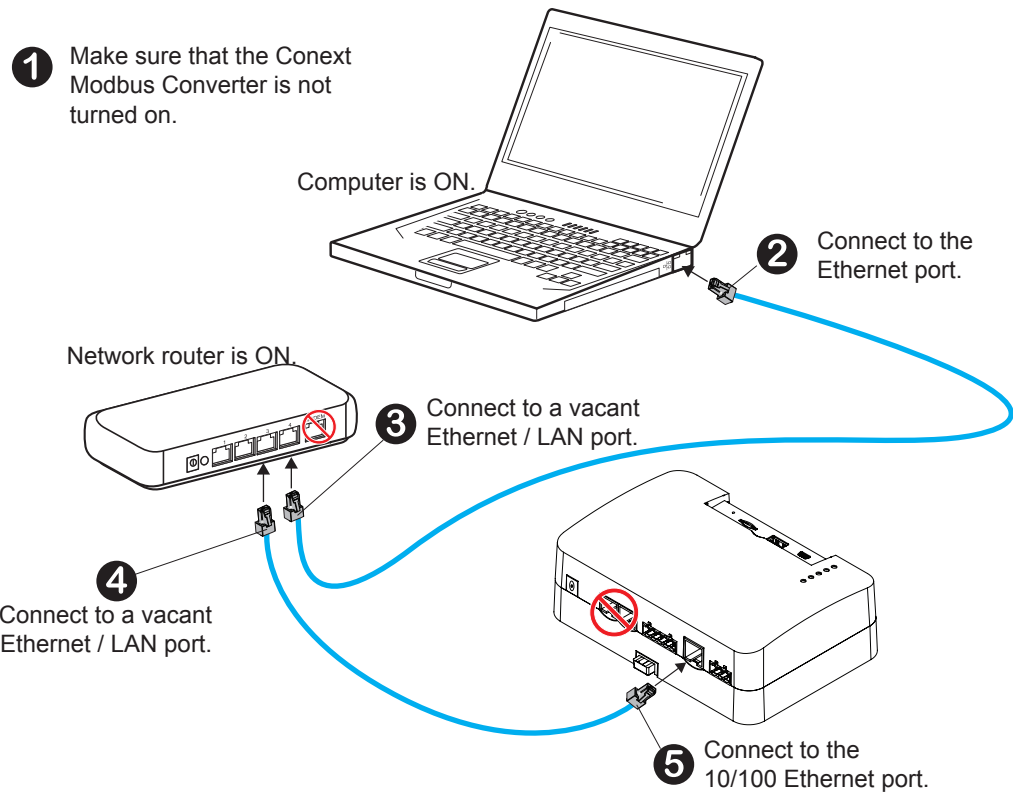

H1 Turning On the Modbus Converter

- OPTION 1 Connect the AC/DC adapter (supplied)
- OPTION 2 Connect a 24V power supply via the RS 485 connector (see next section H2)

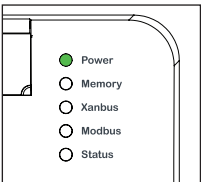

When power is applied to the Conext Modbus Converter using either options, all the LED lights will flash once and then the Power LED will flash intermittently for approximately two minutes. Then, the Power LED lights up steadily.

H2 Connecting a 24V power supply via the RS 485 connector


⚠ DANGER

HAZARD OF ELECTRIC SHOCK AND FIRE

The RS 485 connector must only be connected to a circuit rated 24V max, 1A max (fused on the positive wire), and supplied from an SELV source. Failure to follow these instructions will result in death or serious injury.

DC WIRE SPECIFICATIONS

16–24 AWG  
(1.5 mm<sup>2</sup>–0.25 mm<sup>2</sup>) wire

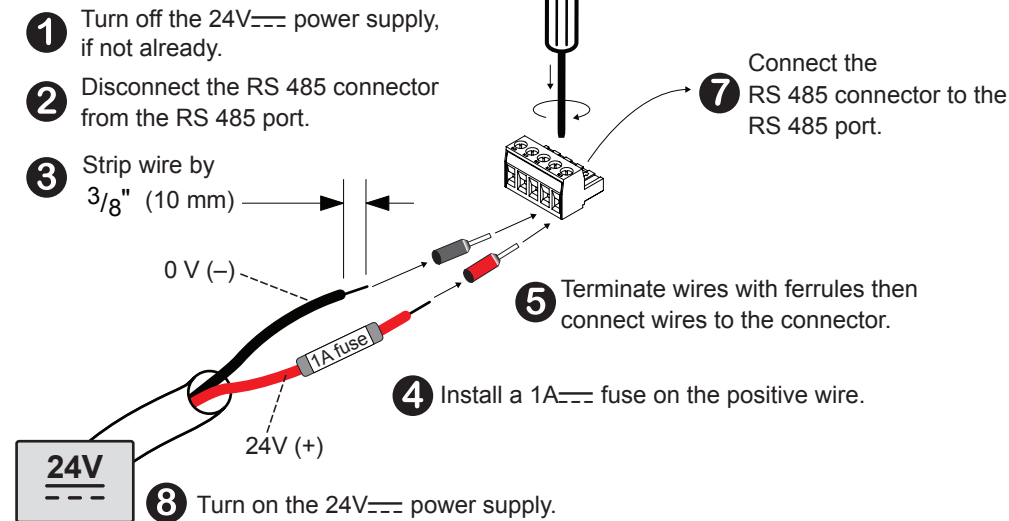

I Discovering the Conext Modbus Converter on the Network

PREREQUISITES

- OS ■ Windows 7 ■ XP (SP2, SP3) ■ Vista ■ Mac OS X 10.4.8.
- Web browsers ■ Windows Internet Explorer 8.x and later ■ Firefox 12.x and later ■ Google Chrome 18.x and later ■ Safari 5.x and later
- Other hardware ■ USB thumb drive

- Plug a USB thumb drive into the Modbus Converter's USB Host data port while the Modbus Converter is turned on (the Power LED is steadily on and not flashing).
- Watch the Memory LED and wait for it to flash quickly five times.
- Remove the USB thumb drive from the USB Host data port.
- Plug the USB thumb drive into your computer's USB port.
- Navigate to the root directory of the thumb drive using the file system browser on your computer.
- Look for a file named *serial number.html*, where *serial number* is the serial number of the Modbus Converter.

- Double-click on the *serial number.html* file. Your default web browser will launch and display the System Information below.

Model Number: 865-1059

Serial Number: B12761896

Hardware Revision: Rev-C

Device Name: ComBox-B12761896

MAC Address: 00-00-54-FE-01-17

IP Address: 10.167.76.192

Hostname: cb-B12761896

Software ID: 150-0279

Kernel Version: 1.17

Application Version: Ver01.01BN0310

Application Build Date: 2013-04-25\_00-01-52

Boot Loader Version: Ver01.00BN0015

Boot Loader Build Date: 2012-10-31\_09-28-09

Date and Time: 2013/04/26 02:06:23

Time Zone: (-08:00)Pacific-Time\_US\_Canada\_Tijuana

Uptime: 207

Connect

- Click on the Connect button shown within System Information. The web browser opens up and the Modbus Converter user interface Login window appears.

NOTE:

Make sure that your computer is on the same Local Area Network as the Modbus Converter.

J Configuring Device Settings and Connecting to Xanbus

- Enter the User name and Password and click Log In.

User name:

Password:

Log In

Recover Lost Password

Language: EN Apply

User name: admin  
Password: password

The Conext Modbus Converter Status page appears.

Conext Modbus Converter Setup

Conext Modbus Converter Status Information

Address	Device ID	Device Type
70	169450	SCP

Modbus Address List

Status

Setup

Upload

Web Application Version

Conext Modbus Converter Version


Device Information



2 Click the Setup button.



The Conext Modbus Converter Settings page appears.

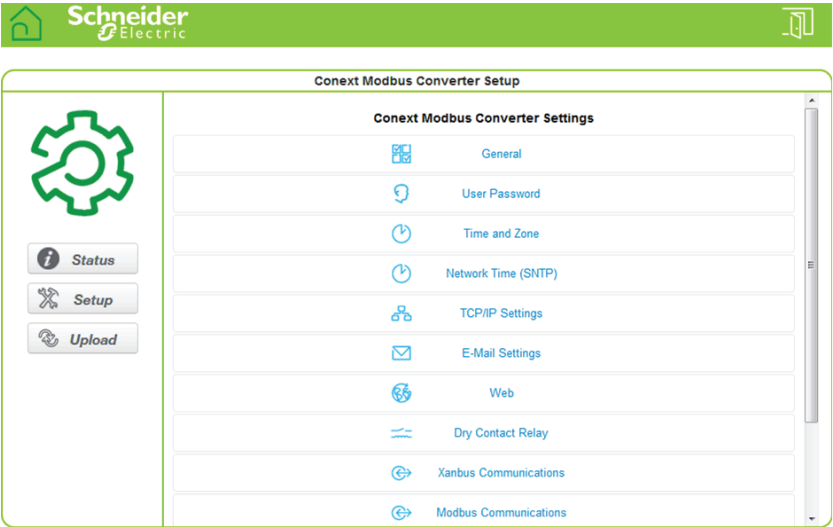

Each of the Settings above, when clicked, will expand and display its sub-settings. With some exceptions, each sub-setting is comprised of two fields – a Parameter and its Value, and two buttons – recall (or refresh) and save.

3 Change the Time and Zone setting before connecting the Modbus Converter to the Xanbus network. To change the setting, click Time and Zone.

WARNING

PHYSICAL INJURY HAZARD

Be careful when changing the Modbus Converter time setting. It will override any time settings on individual Xanbus-enabled devices in the network. The time represents the entire system. Any appliance or equipment that is time-controlled by a Xanbus device, such as a generator connected to an AGS, can inadvertently turn on at the wrong time.

Failure to follow these instructions can result in death or serious injury.

**NOTE:** For more information on another time-related Modbus Converter setting called Network Time (SNTP) and its effect on the Xanbus network, refer to the Conext Modbus Converter Owner's Guide.



Date/Time: 2012/12/11 12:53:18 Set Time

Time Zone: (-8:00) Pacific Time (US, Can) Set Time Zone

To change the Date/Time parameter, overwrite the existing value with the current date (YYYY/MM/DD) and time (HH:MM:SS). Click Set Time to save the new setting.

4 Lost password recovery is not possible without entering a valid e-mail address and enabling e-mail notification. To do this, click E-mail.

Change only the four parameters below.



Parameter	Value
Mailer Status	Enabled
Lost Password E-mail Recipients	user@yourdomain.com
Lost Password E-mail From Address	no-reply@schneider-electric.com
Reset Lost Passwords	No

NOTE:

Change the Reset Lost Passwords to Yes, if you want a new password to be sent to the email address in Lost Password E-Mail Recipients. Retain the default No, if you want the actual password you had forgotten to be sent to the email address in Lost Password E-Mail Recipients.

5 Connect the Modbus Converter to the Xanbus network.

NOTICE


EQUIPMENT DAMAGE

Do not connect a Xanbus cable plug to the 10/100 Ethernet port of the Conext Modbus Converter. Failure to follow these instructions can damage equipment or affect network performance.

NOTE:

- Use Xanbus cables that are longer than 6.5 ft (2 m). The total length of all cables combined must not exceed 131 ft (40 m).
- Xanbus components can be arranged in any order. Use a network terminator at both ends of the network. See illustration below.

Illustration only. Components vary.

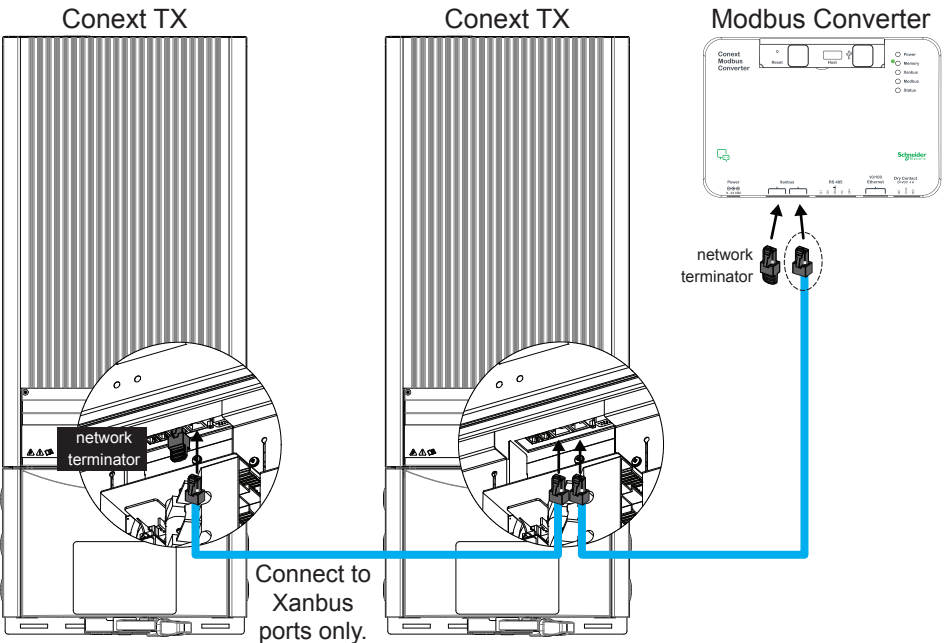

6 Change all other settings as needed. Refer to the Modbus Converter Owner's Guide for more information on all other settings.

K Specifications

ELECTRICAL SPECIFICATIONS

COMMUNICATION INTERFACES

Xanbus	Connector: 2 x RJ45 Products Supported: Conext XW, SW, TX, GT-AUS, MPPT 60, HV MPPT 80, AGS, SCP
Ethernet	Connector: 1 x RJ45, 10/100 MBPS Server: FTP, Web, Modbus TCP/IP Client: SMTP, SNTP, Auto discovery: DPWS
RS 485	Modbus (1 x Connector: Screw 5-terminal, 16-24AWG, 2-wire serial, 19200 bps)

DATA INTERFACES

USB 2.0-Host	Connector: USB-A, Protocols: MSD
POWER SUPPLY (SELV ON ALL SOURCES)	
Power Consumption	2 W average / 10 W peak
AC/DC adapter*	Input: 100-240V~, 50-60Hz, 0.6A, Output: 12V=, 1.5A, 5.5mm outer, 2.1mm center-positive jack
Xanbus	When connected to Conext XW / SW or HV MPPT 80 providing 15V=, 200mA min
24V on RS 485 connector	24V=, 1A max input only through pins 4 and 5

\* When ordering a replacement, reference PN: 0J-921-0023-Z.

MEMORY

Internal	96 MB flash
----------	-------------

GENERAL SPECIFICATIONS

Weight	250 g (0.6 lb)
Housing / Mounting System	ABS Plastic / DIN-rail: 35 mm, Wall-mount: 2-screw
IP rating / Mounting Location	IP 20, NEMA Type 1, Indoor only
Status Display	5 x LEDs
Temperature	Operating: -4 to 122 °F (-20 to 50 °C) Storage: -40 to 185 °F (-40 to 85 °C)
Humidity	Operating: < 95%, non-condensing Storage: < 95%

FEATURES


Programmable dry contact relay	Screw 3-terminal, 16-24 AWG, NC-Com-NO, Class 2, 24V=, 4A max SELV input only
Graphical user interface	Integrated Web Server for Modbus Converter settings only (Internet Browser)
Remote firmware upgrades	Yes
Max. number of Xanbus devices	20 (Actual number depends on device type)

REGULATORY

EMC immunity	EN61000-6-1
EMC emission	EN61000-6-3, FCC Part 15 Class B, Ind. Canada ICES-003 Class B
Substances / environmental	RoHS



DIMENSIONS

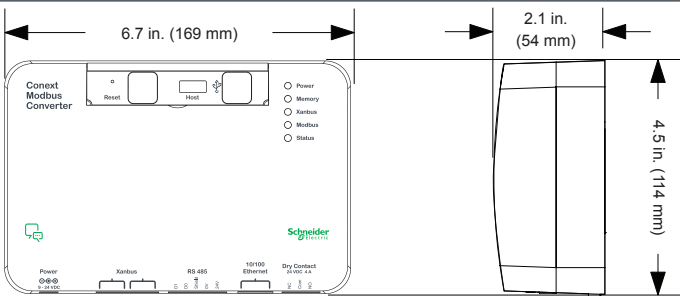

NOTE: Specifications are subject to change without notice.